

Submersible pump Delta Foul V3

Installation and operating manual



**Delta Foul V3
Submersible Pump
(Automatic, 230 V, 10 m cable)**
DMS 120



**Delta Foul V3
Submersible Pump
(Manual, 230 V, 10 m cable)**
DMS E029

Legal information/Copyright

Installation/Operating Manual Delta Foul V3 Submersible Pump.

Original operating manual. All rights reserved. The contents provided herein must neither be distributed, copied, reproduced, edited or processed for any other purpose, nor otherwise transmitted, published or made available to a third party without the manufacturer's express written consent.

Subject to technical modification without prior notice.

	Glossary	6
1	General	7
1.1	Principles	7
1.2	Installation of partly completed machinery	7
1.3	Target group	7
1.4	Other applicable documents	7
1.5	Symbols	8
2	Safety	9
2.1	Key to safety symbols/markings	9
2.2	General	10
2.3	Intended use	10
2.4	Personnel qualification and training	11
2.5	Consequences and risks caused by non-compliance with this manual	11
2.6	Safety awareness	12
2.7	Safety information for the user/operator	12
2.8	Safety information for maintenance, inspection and installation	12
2.9	Unauthorised modes of operation	13
3	Transport/Temporary Storage/Disposal	14
3.1	Checking the condition upon delivery	14
3.2	Transport	14
3.3	Storage/preservation	15
3.4	Return to supplier	16
3.5	Disposal	16
4	Description of the Pump (Set)	17
4.1	General description	17
4.2	Designation	17
4.3	Name plate	17
4.4	Design details	18
4.5	Types of installation	18
4.6	Configuration and function	19
4.7	Scope of supply	20
4.8	Dimensions and weights	20
5	Installation at Site	21
5.1	Safety regulations	21
5.2	Checks to be carried out prior to installation	21
5.2.1	Preparing the place of pedestal mounted (stationary) installations	21
5.2.2	Preparing the place of free-standing (transportable) installations	22
5.3	Installing the pump set	22
5.3.1	Pedestal mounted (stationary) wet installation	22
5.3.2	Free-standing (transportable) installations	26
5.4	Electrical system	27
5.4.1	Information for planning the control system	27
5.4.2	Electrical connection	28

6	Commissioning/Start-up/Shutdown	30
6.1	Commissioning/Start-up	30
6.1.1	Prerequisites for commissioning/start-up	30
6.1.2	Start-up	30
6.2	Operating limits.....	31
6.2.1	Frequency of starts.....	32
6.2.2	Operation on the power supply mains.....	32
6.2.3	Fluid handled.....	32
6.3	Shutdown/storage/preservation	33
6.3.1	Measures to be taken for shutdown	33
6.4	Returning to service	34
7	Servicing/inspection.....	35
7.1	Safety regulations	35
7.2	Servicing/inspection	36
7.2.1	Inspection work.....	36
7.2.2	Lubrication and lubricant change.....	38
7.3	Drainage/cleaning	40
7.4	Dismantling the pump set.....	40
7.4.1	General information/Safety regulations.....	40
7.4.2	Preparing the pump set.....	41
7.4.3	Dismantling the pump section.....	41
7.4.4	Removing the mechanical seal and the motor section.....	41
7.5	Reassembling the pump set.....	41
7.5.1	General information/Safety regulations.....	41
7.5.2	Reassembling the pump section	42
7.5.3	Checking the connection of motor/power supply	42
7.6	Tightening torques	44
7.7	Spare parts stock.....	44
7.7.1	Ordering spare parts	44
7.7.2	Recommended spare parts stock for 2 years' operation to DIN 24296	44
7.7.3	Sets of spare parts.....	45
8	Trouble-shooting.....	46
9	Related Documents	48
9.1	General assembly drawings with lists of components	48
9.2	Exploded views.....	50
9.3	Wiring diagrams.....	51
10	EU Declaration of Conformity.....	52
11	Certificate of Decontamination	53
	Index	54

Installation and operating manual

Submersible pump

Delta Foul V3

Glossary

Certificate of decontamination

A certificate of decontamination is enclosed by the customer when returning the product to the manufacturer to certify that the product has been properly drained to eliminate any environmental and health hazards arising from components in contact with the fluid handled.

Close-coupled design

Motor directly fitted to the pump via a flange or a drive lantern.

Hydraulic system

The part of the pump in which the kinetic energy is converted into pressure energy.

Pump set

Complete pump set consisting of pump, drive, additional components and accessories.

1 General

1.1 Principles

This operating manual is valid for the pumps indicated on the front cover.

The operating manual describes the proper and safe use of this equipment in all phases of operation.

The name plate indicates the type series and size, the main operating data, the order number and the order item number. The order number and order item number clearly identify the pump set and serve as identification for all further business processes.

In the event of damage, immediately contact Edincare Pumps on 01442 211 554 or email info@edincare.com to maintain the right to claim under warranty.

1.2 Installation of partly completed machinery

To install partly completed machinery supplied by Delta Membranes refer to the sub-sections under Servicing/Maintenance.

1.3 Target group

This operating manual is aimed at the target group of trained and qualified specialist technical personnel. (⇒ Section 2.4, Page 11)

1.4 Other applicable documents


Table 1. Overview of other applicable documents

Document	Contents
Data sheet	Description of the technical data of the pump (set)
General arrangement drawing/outline drawing	Description of mating and installation dimensions for the pump (set), weights
Hydraulic characteristic curve	Characteristic curves showing head, flow rate, efficiency and power input
General assembly drawing	Sectional drawing of the pump
Spare parts lists	Description of spare parts
Supplementary operating manuals	e.g. for installation parts for stationary wet installation

For accessories and/or integrated machinery components observe the relevant manufacturer's product literature.

1.5 Symbols

Table 2. Symbols used in this manual.

Symbol	Description
✓	Conditions which need to be fulfilled before proceeding with the step-by-step instructions
▷	Safety instructions
➔	Results of an action
⇒	Cross-references
1. 2.	Step-by-step instructions
	Note Recommendations and important information on how to handle the product

2 Safety







All the information contained in this section refers to hazardous situations.



In addition to the present general safety information the action-related safety information given in the other sections must be observed.

2.1 Key to safety symbols/markings

Table 3. Definition of safety symbols/markings

Symbol	Description
	DANGER This signal word indicates a high-risk hazard which, if not avoided, will result in death or serious injury.
	WARNING This signal word indicates a medium-risk hazard which, if not avoided, could result in death or serious injury.
	CAUTION This signal word indicates a hazard which, if not avoided, could result in damage to the machine and its functions.
	General hazard In conjunction with one of the signal words this symbol indicates a hazard which will or could result in death or serious injury.
	Electrical hazard In conjunction with one of the signal words this symbol indicates a hazard involving electrical voltage and identifies information about protection against electrical voltage.
	Machine damage In conjunction with the signal word CAUTION this symbol indicates a hazard for the machine and its functions.

2.2 General

This operating manual contains general installation, operating and maintenance instructions that must be observed to ensure safe operation of the system and prevent personal injury and damage to property.

The safety information in all sections of this manual must be complied with.

The operating manual must be read and understood by the responsible specialist personnel/operators prior to installation and commissioning.

The contents of this operating manual must be available to the specialist personnel at the site at all times.

Information attached directly to the product must always be complied with and kept in a perfectly legible condition at all times. This applies to, for example:

- Markings for connections
- Name plate


The operator is responsible for ensuring compliance with all local regulations not taken into account in this operating manual.

2.3 Intended use

- The pump (set) must only be operated within the operating limits described in the other applicable documents.
- Only operate pump sets which are in perfect technical condition.
- Do not operate partially assembled pump sets.
- Only use the pump to handle the fluids described in the data sheet or product literature of the pump model or variant.
- Never operate the pump without the fluid to be handled.
- Observe the limits for continuous duty specified in the data sheet or product literature (Q_{min} and Q_{max}) (to prevent damage such as shaft fracture, bearing failure, mechanical seal damage, etc).
- Observe the minimum flow rate and maximum flow rate indicated in the data sheet or product literature (to prevent overheating, mechanical seal damage, cavitation damage, bearing damage, etc).
- Do not throttle the flow rate on the suction side of the pump (to prevent cavitation damage).
- Only operate pumps/pump sets which are in perfect technical condition.
- Consult the manufacturer about any use or mode of operation not described in the data sheet or product literature.
- Observe the limits for continuous duty specified in the data sheet or product literature (Q_{min} and Q_{max}) (to prevent damage such as shaft fracture, bearing failure, mechanical seal damage, etc).
- When untreated waste water is handled, the duty points in continuous operation lie within 0.7 to $1.2 \times Q_{opt}$ to minimise the risk of clogging/hardening.
- Avoid duty points for continuous operation at very low speeds and small flow rates ($< 0.7 \times Q_{opt}$).
- Consult the manufacturer about any use or mode of operation not described in the data sheet or product literature.

NOTE**Free-flow impeller (impeller type F)**

Suitable for fluids containing solids and stringy material as well as fluids with entrapped air or entrapped gas.

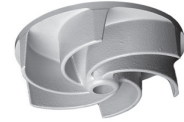**2.3.1 Prevention of foreseeable misuse**

- Observe the minimum flow velocities required to fully open the swing check valves to prevent the reduction of pressure and risk of clogging. (Contact the manufacturer for the required minimum flow velocities/loss coefficients.)
- Never open the discharge-side shut-off elements further than permitted.
 - The maximum flow rates specified in the product literature or data sheet would be exceeded.
 - Risk of cavitation damage
- Never exceed the permissible operating limits specified in the data sheet or product literature regarding pressure, temperature, etc.
- Observe all safety information and instructions in this manual.

2.4 Personnel qualification and training

All personnel involved must be fully qualified to transport, install, operate, maintain and inspect the machinery this manual refers to.

The responsibilities, competence and supervision of all personnel involved in transport, installation, operation, maintenance and inspection must be clearly defined by the operator.

Deficits in knowledge must be rectified by means of training and instruction provided by sufficiently trained specialist personnel. If required, the operator can commission the manufacturer/supplier to train the personnel.

Training on the pump (set) must always be supervised by technical specialist personnel.

2.5 Consequences and risks caused by non-compliance with this manual

- Non-compliance with these operating instructions will lead to forfeiture of warranty cover and of any and all rights to claims for damages.
- Non-compliance can, for example, have the following consequences:
 - Hazards to persons due to electrical, thermal, mechanical and chemical effects and explosions
 - Failure of important product functions
 - Failure of prescribed maintenance and servicing practices
 - Hazard to the environment due to leakage of hazardous substances

2.6 Safety awareness

In addition to the safety information contained in this operating manual and the intended use, the following safety regulations shall be complied with:

- Accident prevention, health regulations and safety regulations
- Explosion protection regulations
- Safety regulations for handling hazardous substances
- Applicable standards, directives and laws

2.7 Safety information for the operator/user

- Provide the personnel with protective equipment and make sure it is used.
- Contain leakages (e.g. at the shaft seal) of hazardous fluids handled (e.g. explosive, toxic, hot) so as to avoid any danger to persons and the environment. Adhere to all relevant laws.
- Eliminate all electrical hazards. (In this respect refer to the applicable national safety regulations and/or regulations issued by the local energy supply companies.)
- If shutting down the pump does not increase potential risk, fit an emergency-stop control device in the immediate vicinity of the pump (set) during pump set installation.

2.8 Safety information for maintenance, inspection and installation

- Modifications or alterations of the pump are only permitted with the manufacturer's prior consent.
- Use only original spare parts or parts authorised by the manufacturer. The use of other parts can invalidate any liability of the manufacturer for resulting damage.
- The operator ensures that maintenance, inspection and installation is performed by authorised, qualified specialist personnel who are thoroughly familiar with the manual.
- Only carry out work on the pump (set) during standstill of the pump.
- Only perform work on the pump set when it has been disconnected from the power supply (de-energised).
- The pump casing must have cooled down to ambient temperature.
- Pump pressure must have been released and the pump must have been drained.
- When taking the pump set out of service always adhere to the procedure described in the manual. (⇒ Section 6.3, Page 33)
- Decontaminate pumps which handle fluids posing a health hazard.
- As soon as the work has been completed, re-install and re-activate any safetyrelevant devices and protective devices. Before returning the product to service, observe all instructions on commissioning. (⇒ Section 6.1, Page 30)

2.9 Unauthorised modes of operation

Never operate the pump (set) outside the limits stated in the data sheet and in this manual.

The warranty relating to the operating reliability and safety of the supplied pump (set) is only valid if the equipment is used in accordance with its intended use.

3 Transport/Temporary Storage/Disposal

3.1 Checking the condition upon delivery

1. On transfer of goods, check each packaging unit for damage.
2. In the event of in-transit damage, assess the exact damage, document it and notify Delta Membranes or the supplying dealer and the insurer about the damage in writing immediately.

3.2 Transport

DANGER



Improper transport


Danger to life from falling parts!

Damage to the pump set!

- ▷ Use the attachment point provided (pump handle) for attaching lifting accessories.
- ▷ Never suspend the pump set by its power cable.
- ▷ Use the lifting chain/rope included in the scope of supply exclusively for lowering/lifting the pump set into/out of the pump sump.
- ▷ Securely attach the lifting chain/rope to the pump and crane.
- ▷ Use tested, marked and approved lifting accessories only.
- ▷ Observe the regional transport regulations.
- ▷ Observe the product literature supplied by the lifting accessory manufacturer.
- ▷ The load-carrying capacity of the lifting accessory must be higher than the weight indicated on the name plate of the pump set to be lifted. Take into account any additional system components to be lifted.
- ▷ Always use the pump handle for transporting the pump (also for manual transport).
- ▷ Always place the pump vertically on a solid surface with the motor on top.

To transport the pump set suspend it from the lifting tackle as shown.

Figure 1. Transporting the pump set

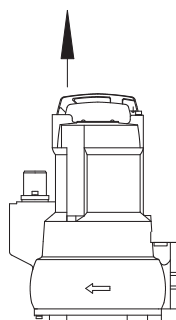

3.3 Storage/preservation

If commissioning is to take place some time after delivery, we recommend that the following measures be taken for storage:

CAUTION



Improper storage

Damage to the power cable!

- ▷ Support the power cables at the cable entry to prevent permanent deformation.

CAUTION



Damage during storage due to humidity, dirt, or vermin

Corrosion/contamination of the pump (set)!

- ▷ For outdoor storage cover the packed or unpacked pump (set) and accessories with waterproof material.

Store the pump set under dry and vibration-free conditions at a temperature above 0 °C, in a vertical position and in its original packaging.

1. Spray-coat the inside wall of the pump casing, and in particular the impeller clearance areas, with a preservative.
2. Spray the preservative through the suction and discharge nozzles.
It is advisable to then close the pump nozzles (e.g. with plastic caps or similar).
3. Check the power cable for damage. Attach it to the pump handle to prevent it from trailing on the floor. Protect the cable end against moisture.

NOTE



Observe the manufacturer's instructions for application/removal of the preservative.

3.4 Return to supplier

1. Drain the pump as per operating instructions. (⇒ Section 7.3, Page 40)
2. Flush and clean the pump, particularly if it has been used for handling noxious, explosive, hot or other hazardous fluids.
3. If the pump has handled fluids whose residues could lead to corrosion damage in the presence of atmospheric humidity or could ignite upon contact with oxygen also neutralise the pump and blow through with anhydrous inert gas to ensure drying.
4. Always complete and enclose a certificate of decontamination when returning the pump. Indicate any safety measures and decontamination measures taken. (⇒ Section 11, Page 53)

3.5 Disposal

WARNING



Fluids handled, consumables and supplies which are hot and/or pose a health hazard

Hazard to persons and the environment!

- ▷ Collect and dispose of any preservatives, flushing liquids and fluid residues.
- ▷ Wear safety clothing and a protective mask, if required.
- ▷ Observe all legal regulations on the disposal of fluids posing a health hazard.

1. Dismantle the pump (set).
Collect greases and other lubricants during dismantling.
2. Separate and sort the pump materials, e.g. by:
 - Metals
 - Plastics
 - Electronic waste
 - Greases and other lubricants
3. Dispose of materials in accordance with local regulations or in another controlled manner.



Electrical or electronic equipment marked with the adjacent symbol must not be disposed of in household waste at the end of its service life.

Contact your local waste disposal partner for returns.

If the used electrical or electronic equipment contains personal data, the user is responsible for deleting it before the equipment is returned.

4 Description of the Pump (Set)

4.1 General description

Submersible motor pump for handling domestic waste water, raw water and waste water containing faeces in intermittent operation. Non-explosion proof, non-self-priming.


Delta Foul V3 Submersible Pumps are not approved for use in countries stipulating explosion-proof units for handling waste water containing faeces.

4.2 Designation

Product name	DMS code	Integral float
Delta Foul V3 (Automatic) Submersible Pump	DMS 120	Yes
Delta Foul V3 (Manual) Submersible Pump	DMS E029	No

4.3 Name plate

Figure 2. Name plate example

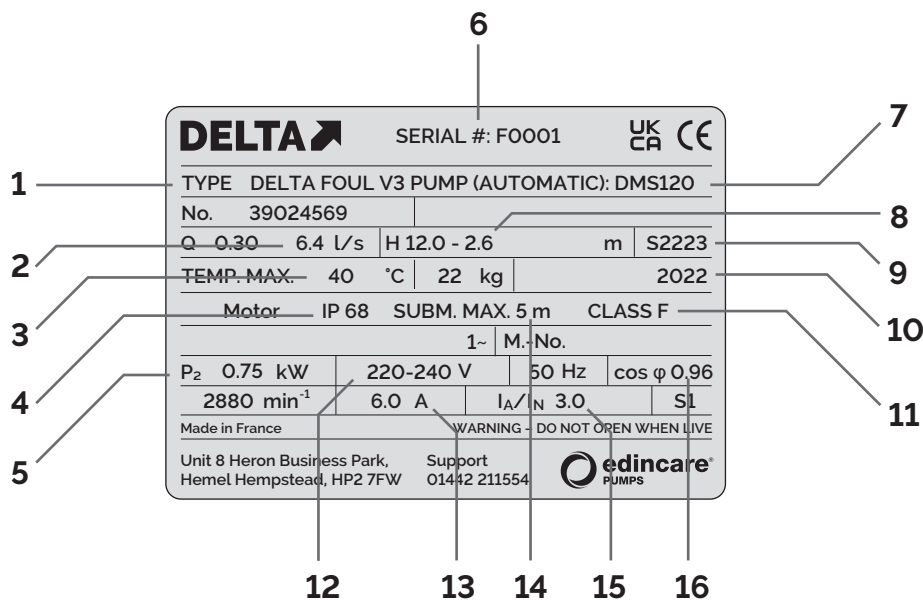

- | | | |
|------------------------------------|---|-----------------------------|
| 1. Pump type | 7. Product code | 13. Full load current |
| 2. Maximum flow rate | 8. Maximum head | 14. Maximum immersion depth |
| 3. Max. fluid ambient temperature | 9. Batch number | 15. Starting current ratio |
| 4. Ingress protection of enclosure | 10. Year of manufacture | 16. Power factor |
| 5. Rated power (P ₂) | 11. Thermal class of winding insulation | |
| 6. Serial number | 12. Rated voltage | |

4.4 Design details

Design

- Fully floodable submersible motor pump
- Close-coupled design
- Vertical installation
- Single-stage

Installation

- Wet-installed stationary model
- Wet-installed transportable model

Drive

- Single-phase AC motor, 50 Hz, 230 V, with integrated temperature switch
- Enclosure IP68 (permanently submerged) to EN 60529 / IEC 529
- Thermal class F

Shaft seal

- Drive end: shaft seal ring
- Pump end: 1 bi-directional mechanical seal with liquid reservoir

Impeller type

- Free-flow impeller

Bearings

- Grease-packed bearings sealed for life

4.5 Types of installation

Two design variants are available, depending on the installation type:

- Pedestal mounted, eg Delta V3 Foul 800 Series
- Free-standing (transportable), eg Delta Foul V3 Packaged Pumping Station

The pump set is designed for continuously submerged operation. The motor is cooled by the pumped fluid on the motor surface. Short-term operation with the motor outside the fluid handled is possible if the fluid level is above the level R specified by Delta Membranes (see outline drawings).

4.6 Configuration and function

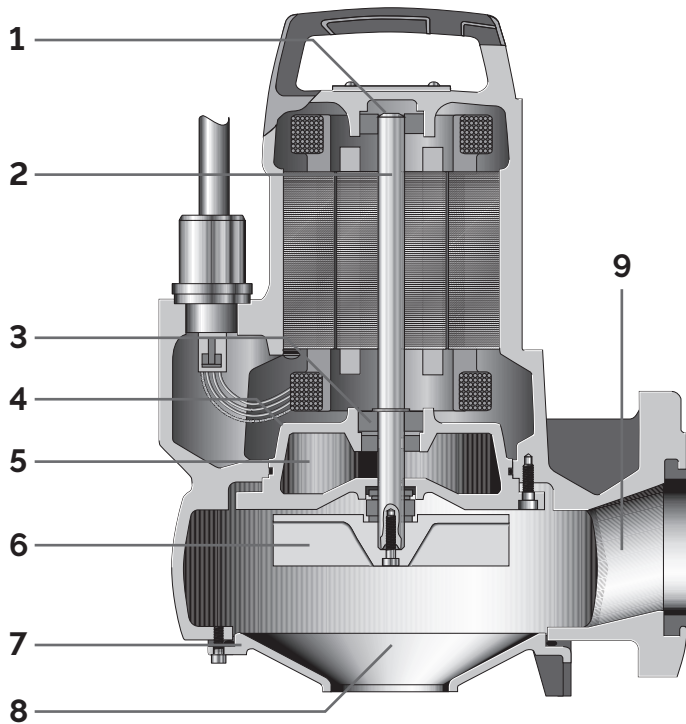


Figure 3: Sectional drawing

1. Rolling element bearing, motor end
2. Shaft
3. Rolling element bearing, pump end
4. Bearing bracket
5. Shaft seal
6. Impeller
7. Suction cover
8. Suction nozzle
9. Discharge nozzle

4.6.1 Design

The pump is designed with an axial fluid inlet and a radial outlet. The hydraulic system sits on the extended motor shaft. The shaft runs in common bearings.

4.6.2 Function

The fluid enters the pump axially via the suction nozzle (8) and is accelerated outward in a cylindrical flow by the rotating impeller (6). In the flow passage of the pump casing the kinetic energy of the fluid is converted into pressure energy. The fluid is pumped to the discharge nozzle (9), where it leaves the pump. At the rear side of the impeller, the shaft (2) enters the casing via the discharge cover. The shaft passage through the cover is sealed to (is sealed to) atmosphere with a shaft seal (5). The shaft runs in rolling element bearings (1 and 2), which are supported by a bearing bracket (4) connected to the pump casing and/or discharge cover.

4.6.3 Sealing

The pump-end shaft seal is a bi-rotational mechanical seal; the motor-end seal is a shaft seal ring.

A lubricant reservoir between the shaft seal ring and the mechanical seal provides cooling and lubrication..

4.7 Scope of supply

Depending on the model, the following items are included in the scope of supply:

Pedestal mounted (stationary) wet-installations

- Pump set complete with power cables
- Claw with sealing element (O-ring) and mounting elements
- Lifting rope/lifting chain (optional)
- Mounting bracket with mounting elements
- Duckfoot bend with mounting elements
- Guiding accessories (guide rails are not included in Delta's scope of supply)

Free-standing (transportable) wet-installations

- Pump set complete with power cables
- Installation parts for transportable models, comprising:
 - 3 feet
 - Connection elbow
 - Connection piece
 - And clamp
- Lifting rope/lifting chain (optional)

NOTE



A separate name plate is included in Delta Membranes' scope of supply. This name plate must be attached in a clearly visible position outside the place of installation, e.g. at the control panel, pipeline or mounting bracket.

4.8 Dimensions and weights

For dimensions and weights refer to the general arrangement drawing/outline drawing or data sheet of the pump set.

5 Installation at site

5.1 Safety regulations

DANGER



Persons in the tank during pump operation

Electric shock!

Risk of injury!

Danger of death from drowning!

- ▷ Never start up the pump set when there are persons in the tank.

WARNING



Impermissible solid objects (tools, screws/bolts or similar) in the pump sump/inlet tank during pump start-up

Personal injury and damage to property!

- ▷ Check the pump sump/inlet tank for impermissible solid objects before flooding, and remove, if necessary.

5.2 Checks to be carried out prior to installation

5.2.1 Preparing the place of pedestal mounted (stationary) installations

WARNING



Installation on mounting surfaces which are unsecured and cannot support the load

Personal injury and damage to property!

- ▷ Ensure the concrete's compressive strength is sufficient (in accordance with C35/45 in exposure class XC1 to EN 206-1).
- ▷ The mounting surface must have set and must be completely horizontal and even.
- ▷ Observe the weights indicated.

Resonances

Any resonances at the usual excitation frequencies (1 x and 2 x rotational frequency, blade passing frequency) must be prevented both in the foundation and in the connected piping, as such frequencies may cause extreme vibrations.

Check the structural requirements.

All structural work required must have been prepared in accordance with the dimensions stated in the outline drawing/general arrangement drawing.

5.2.2 Preparing the place of free-standing (transportable) installations

WARNING**Incorrect positioning/placing down**

Personal injury and damage to property!

- ▷ Position the pump set vertically with the motor on top.
- ▷ Use appropriate means to secure the pump set against tilting and tipping over.
- ▷ Refer to the weights given in the data sheet/on the name plate.

Resonances

Any resonances at the usual excitation frequencies (1 x and 2 x rotational frequency, blade passing frequency) must be prevented both in the foundation and in the connected piping, as such frequencies may cause extreme vibrations.

Check the structural requirements

All structural work required must have been prepared in accordance with the dimensions stated in the outline drawing/general arrangement drawing.


5.3 Installing the pump set

Always observe the general arrangement drawing/outline drawing when installing the pump set.

5.3.1 Pedestal mounted (stationary) wet installation**5.3.1.1 Fastening the pedestal with chemical anchors**

In a concrete sump the pedestal is fastened with chemical anchors.

Figure 4. Fastening the pedestal.

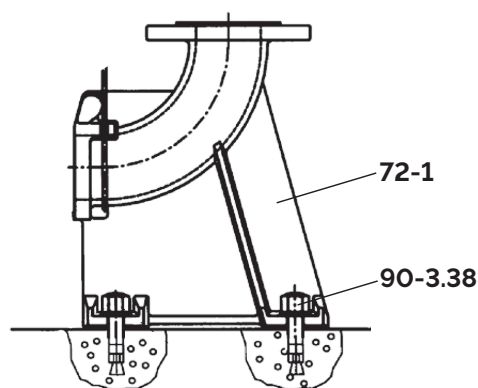

1. Position duckfoot bend 72-1 on the floor of the tank/sump.
2. Insert chemical anchors 90-3.38.
3. Bolt duckfoot bend 72-1 to the floor with chemical anchors 90-3.38.

Figure 5. Dimensions

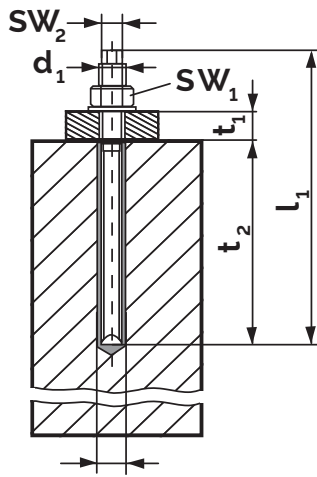


Table 4. Chemical anchor dimensions (mm)

Size (d1 × l1)	d2	t1	t2	SW1	SW2	Md1
M10 × 130	12	20	90	17	7	20

Table 5. Curing times of mortar cartridge

Floor temperature °C	Curing time (minutes)
-5 to 0	240
0 to +10	45
+10 to +20	20
> +20	10

5.3.1.2 Connecting the piping

DANGER



Impermissible loads acting on the flange of the pedestal

Danger to life from escaping hot, toxic, corrosive or flammable fluids!

- ▷ Do not use the pump as an anchorage point for the piping.
- ▷ Anchor the pipes in close proximity to the pump and connect them without transmitting any stresses or strains..
- ▷ Observe the permissible flange loads.
- ▷ Take appropriate measures to compensate for thermal expansion of the piping.

NOTE



When the pump set is used for draining low-level building areas, install a swing check valve in the discharge line to avoid backflow from the sewer system.

CAUTION



Critical speed

Increased vibrations!

Damage to mechanical seals and bearings!

- ▷ Install a swing check valve in longer riser pipes to prevent the pump from excessive running in reverse. When fitting a swing check valve, make sure that the unit can still be vented properly.

Figure 6. Permissible flange loads

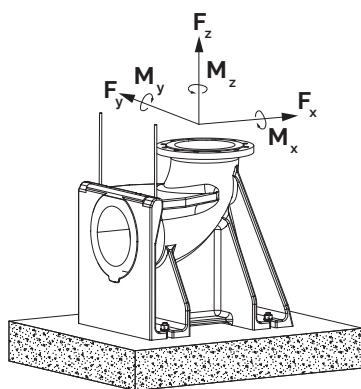


Table 6. Permissible flange loads for Delta Foul V3 Pedestal (DN50)

Forces [N]				Moments [Nm]			
Fy	Fz	Fx	ΣF	My	Mz	Mx	ΣM
1350	1650	1500	2600	1000	1150	1400	2050

5.3.1.3 Fitting the guide rail arrangement

The pump set is guided into the sump or tank along one vertical guide rails. It attaches itself automatically to the pedestal which has been fitted to the floor.

NOTE



The guide rails are not included in Delta Membranes' scope of supply. Select guide rail materials which are suitable for the fluid handled or as specified by the operator.

Observe the following dimensions for the guide rails:

Table 7. Guide rail dimensions (mm)

Outside diameter	Wall thickness *	
	Minimum	Maximum
33.7	2	3.8

*To DIN 2440/2442/2462 or equivalent standards

5.3.1.4 Fitting the mounting bracket

The pump set is guided into the sump or tank along one vertical guide rails. It attaches itself automatically to the pedestal which has been fitted to the floor.

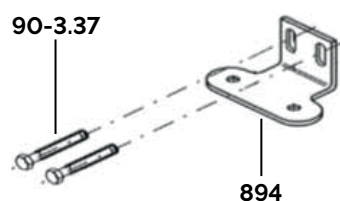


Figure 7. Fitting the mounting bracket.

CAUTION**Improper installation of the guide rails**


Damage to the guide rail arrangement!

- ▷ Always adjust the guide rails so that they are in a perfectly vertical position.

5.3.1.5 Fitting the guide rail

1. Position rail 710 into the recess of pedestal 72.1. Place the rail in a vertical position.
2. Mark the length of rail 710 (up to the lower edge of the mounting bracket), taking into account the adjusting range of the slotted holes in mounting bracket 894.
3. Shorten rail 710 with a 90° cut to the pipe axis. Debur the rail inside and outside.
4. Insert mounting bracket 894 into guide rail 710 until the mounting bracket rests on the rail end.


Figure 8. Fitting the guide rail

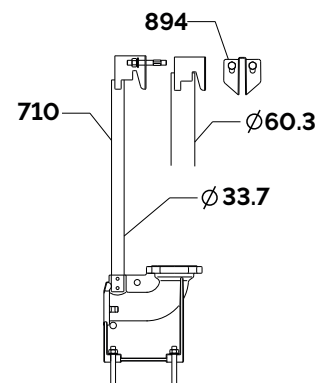**5.3.1.6 Preparing the pump set**

Fastening the claw for single guide rail arrangement.

1. Fasten claw 723 with screw 914.05 and disc 550.35 to the discharge flange (see drawing). Tighten the screw to a torque of 17 Nm.

Figure 9. Fastening the claw

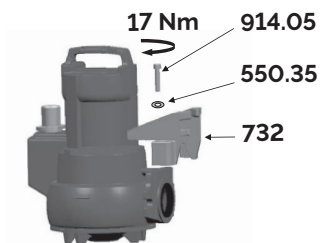
**5.3.1.7 Attaching the lifting chain / rope for pedestal mounted (stationary) wet installation.**

1. Attach the lifting chain or rope to the lug/eyebolt/bail at the pump set on the opposite side of the discharge nozzle. This attachment point achieves a forward inclination of the pump set towards the discharge nozzle, which allows the pump claw to hook onto the pedestal..

Figure 10. Attaching the lifting chain for pedestal mounted (stationary) wet installations



Table 8. Types of attachment

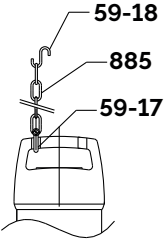Drawing	Type of attachment	
	Shackle with chain at the pump casing	
	59-17	Shackle
	59-18	Hook
	885	Chain

5.3.1.8 Installing the pump set

NOTE



Make sure the pump set with the pre-assembled claw can easily be guided over the mounting bracket, threaded onto the guide wires and lowered down. If required, alter the position of the crane during installation.

1. Guide the pump set over the suspension bracket/mounting bracket and slowly lower it down along the guide wire/guide rail(s). The pump set attaches itself to pedestal 72-1.
2. Attach the lifting chain/rope to hook 59-18 at the mounting bracket.

Figure 11. Attaching the lifting chain for free-standing (transportable) installations



5.3.2 Free-standing (transportable) installations

Before installing the pump set, fit the 3 pump feet, the connection elbow and the connection piece from the installation kit for transportable models.

5.3.2.1 Fitting the pump feet

1. Undo screws 914.03.
2. Push pump feet 182 into the openings in the suction cover.
3. Tighten screws 914.03 again to the indicated tightening torque.

5.3.2.2 Attaching the lifting chain/rope

Attach the lifting chain or rope to the lug/eyebolt/bail at the pump set on the side of the discharge nozzle.

5.3.2.3 Connecting the piping

The DIN connection can be connected to rigid or flexible pipes.

5.4 Electrical system

5.4.1 Information for planning the control system

For the electrical connection of the pump set observe the "Wiring diagrams" section. The pump set is supplied with power cables; it is wired for DOL starting.

The motors can be connected to electrical low-voltage grids with rated voltages and voltage tolerances to IEC 60038. The permissible tolerances must be observed.

5.4.1.1 Overload protection

1. Protect the pump set against overloading by a thermal time-lag overload protection device in accordance with IEC 60947 and local regulations.
2. Set the overload protection device to the rated current specified on the name plate.

5.4.1.2 Level control

CAUTION



Fluid level below the specified minimum

Damage to the pump set by cavitation!

- ▷ Never allow the fluid level to drop below the specified minimum.

Automatic operation of the pump set in a tank requires the use of level control equipment.

Observe the minimum fluid level.

5.4.1.3 Sensors

DANGER



Operating a pump set that has not been fully connected

Explosion hazard!

Damage to the pump set!

- ▷ Never start up a pump set with power cables that have not been fully connected or non-operational monitoring devices.

A thermal motor protection device is integrated in the motor.

5.4.1.4 Motor temperature

CAUTION



Insufficient cooling

Damage to the pump (set)!

- ▷ Never operate a pump (set) without operational temperature monitoring.

The thermal motor protection device stops the pump if the maximum permissible motor temperature is reached and re-starts it automatically after the motor has cooled down. The pump's power supply must be protected by a circuit breaker set to the rated motor current or a 10A fuse.

5.4.2 Electrical connection

DANGER



Electrical connection work by unqualified personnel

Risk of fatal injury due to electric shock!

- ▷ Always have the electrical connections installed by a trained and qualified electrician.
- ▷ Observe the IEC 60364 regulations as well as any regional regulations.

WARNING



Incorrect connection to the mains

Damage to the mains network, short circuit!

- ▷ Observe the technical specifications of the local energy supply companies.
- ▷ Inspect the power cable for visible damage.
- ▷ Never connect damaged power cables.

CAUTION



Improper routing of power cable

Damage to the power cables!

- ▷ Never move the power cables at temperatures below - 25 °C.
- ▷ Never kink or crush the power cables.
- ▷ Never lift the pump set by the power cables.
- ▷ Adjust the length of the power cable to the site requirements.

CAUTION



Motor overload

Damage to the motor!

- ▷ Protect the motor by a thermal time-lag overload protection device in accordance with IEC 60947 and local regulations.

For electrical connection observe the wiring diagrams and the information for planning the control system (⇒ Section 9.3, Page 51).

The pump set is supplied with a connection cable. Always connect all marked cores.

DANGER



Operating a pump set that has not been fully connected

Explosion hazard!

Damage to the pump set!

- ▷ Never start up a pump set with power cables that have not been fully connected or non-operational monitoring devices.

DANGER



Connection of damaged power cables

Danger of death from electric shock!

- ▷ Check the power cables for damage before connecting them.
- ▷ Never connect damaged power cables.
- ▷ Replace damaged power cables.

CAUTION



Flow-induced motion

Damage to the power cable!

- ▷ Run the power cable upwards without slack.

1. Run the power cables directly upwards without slack, and fasten.
2. If necessary, adjust the length of the power cables to the site requirements.
3. After shortening the cables, correctly re-affix the markings of the individual cores at the cable ends.

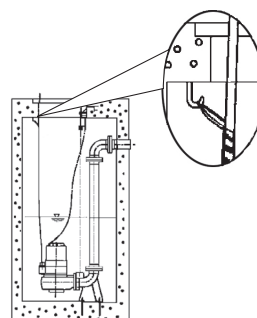


Figure 12. Fastening the power cables

DANGER



Touching the pump set during operation

Electric shock!

- ▷ Make sure that the pump set cannot be touched during operation.

6 Commissioning / Start-up / Shutdown

6.1 Commissioning/Start-up

6.1.1 Prerequisites for commissioning/start-up

CAUTION



Fluid level too low

Damage to the pump set!

- ▷ Always operate the pump set in such a way that air cannot ingress into the pump casing.
- ▷ Never allow the fluid level to drop below the specified minimum (R3).
- ▷ For continuous operation (S1) operate the pump set in fully submerged condition.

DANGER



Persons in the tank during pump operation

Electric shock!

Risk of injury!

Danger of death from drowning!

- ▷ Never start up the pump set when there are persons in the tank.

Before commissioning/starting up the pump set, make sure that the following conditions are met:

- The pump set has been properly connected to the power supply and is equipped with all protection devices.
- The pump has been primed with the fluid to be pumped.
- The direction of rotation has been checked.
- After prolonged shutdown of the pump (set), the required activities have been carried out. (⇒ Section 6.3, Page 33)

6.1.2 Start-up

DANGER



Persons in the tank during pump operation

Electric shock!

Risk of injury!

Danger of death from drowning!

- ▷ Never start up the pump set when there are persons in the tank.

CAUTION**Re-starting while motor is still running down**

Damage to the pump set!

- ▷ Do not re-start the pump set before it has come to a standstill.
- ▷ Never start up the pump set while the pump is running in reverse.

✓ The fluid level is sufficiently high.

CAUTION**Start-up against a closed shut-off element**

Increased vibrations!

Damage to mechanical seals and bearings!

- ▷ Never operate the pump set against a closed shut-off element.

1. Fully open the discharge line shut-off element, if any.
2. Start up the pump set.

6.2 Operating limits

DANGER**Non-compliance with operating limits**

Damage to the pump set!

- ▷ Comply with the operating data indicated in the data sheet..
- ▷ Avoid operation against a closed shut-off element..
- ▷ Never operate the pump set at ambient or fluid temperatures exceeding those specified in the data sheet or on the name plate.
- ▷ Never operate the pump set outside the limits specified below..

6.2.1 Frequency of starts

CAUTION



Excessive frequency of starts

Risk of damage to the motor!

- ▷ Never exceed the specified frequency of starts.

To prevent high temperature increases in the motor, do not exceed the following number of starts per hour.

Table 9: Frequency of starts

Interval	Maximum frequency of starts
Start ups per hour	15

These values apply to mains start-ups.

6.2.2 Operation on the power supply mains

The maximum permissible deviation in supply voltage is $\pm 10\%$ of the rated voltage. The voltage difference between the individual phases must not exceed 1%.

6.2.3 Fluid handled

6.2.3.1 Temperature of the fluid handled

The pump set is designed for transporting liquids. The pump set is not operational under freezing conditions.

CAUTION



Danger of freezing!

Damage to the pump set!

- ▷ Drain the pump set or protect it against freezing.

Refer to the maximum permissible fluid temperature and ambient temperature indicated on the name plate and/or in the data sheet.

6.2.3.2 Minimum level of fluid handled

CAUTION

**Fluid level below the specified minimum**

Damage to the pump set by cavitation!

- ▷ Never allow the fluid level to drop below the specified minimum.

Before starting up the pump, make sure that the minimum fluid level is always higher than dimension R (see outline drawing). For continuous operation (S1) the pump must be fully submerged.

6.3 Shutdown/storage/preservation

6.3.1 Measures to be taken for shutdown

DANGER

**Electrical connection work by unqualified personnel**

Risk of fatal injury due to electric shock!

- ▷ Always have the electrical connections installed by a trained and qualified electrician.
- ▷ Observe the IEC 60364 regulations as well as any regional regulations.

WARNING

**Unintentional starting of the pump set**

Risk of injury by moving components and shock currents!

- ▷ Ensure that the pump set cannot be started unintentionally.
- ▷ Always make sure the electrical connections are disconnected before carrying out work on the pump set.

WARNING

**Fluids handled, consumables and supplies which are hot and/or pose a health hazard**

Risk of injury!

- ▷ Observe all relevant laws.
- ▷ When draining the fluid take appropriate measures to protect persons and the environment.
- ▷ Decontaminate pumps which handle fluids posing a health hazard.

CAUTION**Danger of frost/freezing**

Damage to the pump set!

- ▷ If there is any danger of frost/freezing, remove the pump set from the fluid handled and clean, preserve and store it.

The pump set remains installed

- ✓ Ensure sufficient fluid is available for the operation check run of the pump set.

1. For prolonged shutdown periods, start up the pump set regularly between once a month and once every three months for approximately one minute. This will prevent the formation of deposits within the pump and the pump intake area.

The pump (set) is removed from the pipe and stored

- ✓ All safety regulations are observed. (⇒ Section 7.1, Page 35)

1. Clean the pump set.
2. Preserve the pump set.
3. Observe the instructions given in (⇒ Section 3.3, Page 15) .

6.4 Returning to service

For returning the pump set to service, observe the items on commissioning/start-up. (⇒ Section 6.1, Page 30)

Refer to and comply with the operating limits. (⇒ Section 6.2, Page 30)

For returning the pump set to service after storage also follow the instructions for maintenance/inspection.

WARNING**Failure to re-install or re-activate protective devices**

Risk of injury from moving parts or escaping fluid!

- ▷ As soon as the work is completed, re-install and re-activate any safety-relevant devices and protective devices.

NOTE

On pumps/pump sets older than 5 years we recommend replacing all elastomer seals.

7 Servicing/inspection

7.1 Safety regulations

The operator ensures that maintenance, inspection and installation is performed by authorised, qualified specialist personnel who are thoroughly familiar with the manual.

WARNING



Unintentional starting of the pump set

Risk of injury by moving components and shock currents!

- ▷ Ensure that the pump set cannot be started unintentionally.
- ▷ Always make sure the electrical connections are disconnected before carrying out work on the pump set.

WARNING



Fluids handled, consumables and supplies which are hot and/or pose a health hazard

Risk of injury!

- ▷ Observe all relevant laws.
- ▷ When draining the fluid take appropriate measures to protect persons and the environment.
- ▷ Decontaminate pumps which handle fluids posing a health hazard.

WARNING



Hot surface

Risk of injury!

- ▷ Allow the pump set to cool down to ambient temperature.

WARNING



Improper lifting/moving

Personal injury and damage to property!

- ▷ Always use the pump handle when moving the pump.

WARNING**Insufficient stability**

Risk of crushing hands and feet!

- ▷ During assembly/dismantling, secure the pump (set)/pump parts to prevent tilting or tipping over.

A regular maintenance schedule will help avoid expensive repairs and contribute to trouble-free, reliable operation of the pump, pump set and pump parts with a minimum of servicing/maintenance expenditure and work.

NOTE

All maintenance work, service work and installation work can be carried out by Edincare Pumps or Delta authorised service providers. For contact details please refer to the enclosed "Addresses" booklet or visit www.edincare.com.

Never use force when dismantling and reassembling the pump set.

7.2 Servicing/inspection

Delta Membranes recommends the following regular maintenance schedule:

Table 10. Overview of maintenance work

Maintenance interval	Maintenance work	For details refer to...
Every 4,000 operating hours (at least once a year)	Measure the insulation resistance.	(⇒ Section 7.2.1.3, Page 37)
	Check the power cable and float switch cable.	(⇒ Section 7.2.1.2, Page 37)
	Visually inspect the lifting chain/rope.	(⇒ Section 7.2.1.1, Page 36)
	Change the lubricant.	(⇒ Section 7.2.2.2.4, Page 39)
	Inspect the bearings.	
Every five years	General overhaul	

7.2.1 Inspection work**7.2.1.1 Checking the lifting chain/rope**

- ✓ The pump set has been lifted out of the pump sump and cleaned.
 1. Inspect the lifting chain/rope as well as their fasteners for any visible damage.
 2. Replace any damaged components by original spare parts.

7.2.1.2 Checking the power cables**Visual inspection**

- ✓ The pump set has been lifted out of the pump sump and cleaned.
 1. Inspect the power cables for visible damage.
 2. Replace any damaged components by original spare parts.

Checking the earth conductor

- ✓ The pump set has been lifted out of the pump sump and cleaned.
 1. Measure the resistance between the earth conductor and chassis ground.
The electrical resistance must be lower than 1 Ω .
 2. Replace any damaged components by original spare parts.

DANGER**Defective earth conductor**

Electric shock!

▷ Never switch on a pump set with a defective earth conductor.

7.2.1.3 Measuring the insulation resistance

Measure the insulation resistance of the motor winding during annual maintenance work.

- ✓ The pump set has been disconnected in the control cabinet.
- ✓ Use an insulation resistance measuring device.
- ✓ The recommended measuring voltage is 500 V
(maximum permissible voltage: 1000 V).
 1. Measure the winding to chassis ground. To do so, connect all winding ends together.
- ➔ The insulation resistance of the core ends to chassis ground must not be lower than 1 M Ω . If the resistance measured is lower, power cable and motor resistance must be measured separately. Disconnect the power cable from the motor for this purpose.

NOTE

If the insulation resistance of the power cable is lower than 1 M Ω , the power cable is defective and must be replaced.

If the insulation resistances measured on the motor are too low, the winding insulation is defective. The pump set must not be returned to service in this case.

7.2.2 Lubrication and lubricant change

7.2.2.1 Lubricating the mechanical seal

The mechanical seal is supplied with lubricant from the lubricant reservoir.

7.2.2.2 Lubricating the rolling element bearings

The rolling element bearings of the pump sets are grease-packed and maintenancefree.

7.2.2.2.1 Intervals

Change the lubricant every 4000 operating hours but at least once a year.

7.2.2.2.2 Lubricant quality

The lubricant reservoir is filled at the factory with an environmentally friendly, nontoxic lubricant of medical quality (unless otherwise specified by the customer). The following lubricants can be used to lubricate the mechanical seals:

Table 11: Oil quality

Description	Properties	
Paraffin oil or white oil Alternative: motor oil grades SAE 10W to SAE 20W	Kinematic viscosity at 40 °C	<20 mm ² /s
	Flash point (to Cleveland)	+160 °C
	Solidification point (pour point)	-15 °C

Recommended oil quality:

- Merkur WOP 40 PB, made by SASOL
- Merkur white oil Pharma 40, made by DEA
- Thin-bodied paraffin oil
 - No. 7174, made by Merck
 - Type Clarex OM, made by HAFA
- Equivalent brands of medical quality, non-toxic
- Water-glycol mixture

WARNING



Lubricant contaminating fluid handled

Hazard to persons and the environment!

- ▷ Using machine oil is only permitted if the oil is disposed of properly.

7.2.2.3 Lubricant quantity

Lubricant quantity: 100 ml

7.2.2.4 Changing the lubricant

WARNING



Lubricants posing a health hazard and/or hot lubricants

Hazard to persons and the environment!

- ▷ When draining the lubricant take appropriate measures to protect persons and the environment.
- ▷ Wear safety clothing and a protective mask if required.
- ▷ Collect and dispose of any lubricants.
- ▷ Observe all legal regulations on the disposal of fluids posing a health hazard.

WARNING



Excess pressure in the lubricant reservoir

Liquid spurting out when the lubricant reservoir is opened at operating temperature!

- ▷ Allow the pump set to cool down to ambient temperature.
- ▷ Carefully pull off the mechanical seal.

NOTE



Paraffin oil is bright and transparent in appearance. A slight discolouration, caused by the running-in process of new mechanical seals or small amounts of leakage from the fluid handled, has no detrimental effect. However, if the coolant is severely contaminated by the fluid handled, this suggests a defect at the mechanical seals.

Draining the lubricant

✓ The suction cover and the impeller have been removed.

1. Place a suitable container under the pump set.
2. Move mechanical seal 433.02 along the shaft.
3. Drain the oil.

Figure 13. Draining the lubricant


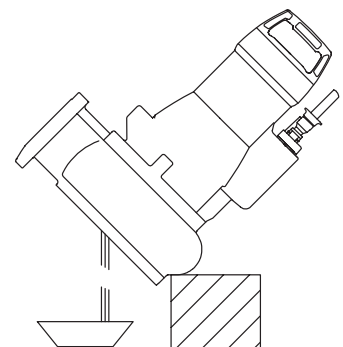


Figure 14.
Filling the lubricant

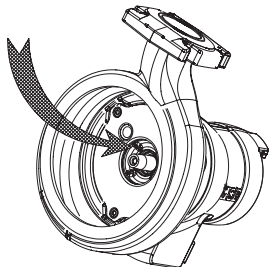

Filling in the lubricant

1. Pour 100 ml of oil through the opening between the stationary part of mechanical seal 433.02 and rotor 818.
2. Thoroughly clean rotor 818 and the contact face of the stationary part of mechanical seal 433.02. Remove any oil residues.
3. Fit the rotating part of mechanical seal 433.02.
4. Fit impeller 230 and suction cover 162. Observe the tightening torques.

7.3 Drainage/cleaning

WARNING



Fluids, consumables and supplies which are hot or pose a health hazard

Hazard to persons and the environment!

- ▷ Collect and properly dispose of flushing fluid and any fluids handled.
- ▷ Wear safety clothing and a protective mask if required.
- ▷ Observe all legal regulations on the disposal of fluids posing a health hazard.

1. Always flush the pump if it has been used for handling noxious, explosive, hot or other hazardous fluids.
2. Always flush and clean the pump before transporting it to the workshop. Provide a certificate of decontamination for the pump set. (⇒ Section 11, Page 50)

7.4 Dismantling the pump set

7.4.1 General information/Safety regulations

WARNING



Unqualified personnel performing work on the pump (set)

Risk of injury!

- ▷ Always have repair work and maintenance work performed by specially trained, qualified personnel.

WARNING**Hot surface**

Risk of injury!

- ▷ Allow the pump set to cool down to ambient temperature.

WARNING**Improper lifting/moving of heavy assemblies or components**

Personal injury and damage to property!

- ▷ Use suitable transport devices, lifting equipment and lifting tackle to move heavy assemblies or components.

Observe the general safety instructions and information.

For dismantling and reassembly observe the general assembly drawing.

In the event of damage contact our service staff Edincare Pumps on 01442 211554 or email info@edincare.com

DANGER**Insufficient preparation of work on the pump (set)**

Risk of injury!

- ▷ Properly shut down the pump set.
- ▷ Close the shut-off elements in the suction line and discharge line.
- ▷ Drain the pump and release the pump pressure.
- ▷ Shut off any auxiliary feed lines.
- ▷ Allow the pump set to cool down to ambient temperature.

WARNING**Components with sharp edges**

Risk of cutting or shearing injuries!

- ▷ Always use appropriate caution for installation and dismantling work.
- ▷ Wear work gloves.

7.4.2 Preparing the pump set

✓ The notes and steps stated in (ð Section 7.4.1, Page 36) have been observed/ carried out.

1. De-energise the pump set and secure it against unintentional start-up.
2. Drain the lubricant.
3. Drain the leakage chamber and leave it open for the duration of the disassembly.

7.4.3 Dismantling the pump section

Dismantle the pump section in accordance with the general assembly drawing.

1. Remove suction cover 162.
2. Unscrew impeller 230.

7.4.4 Removing the mechanical seal and the motor section

When dismantling the motor section and the power cables make sure that the cores/terminals are clearly marked for future reassembly.

✓ The oil has been drained.

1. Undo and remove screws 914.02 at bearing bracket 330.
2. Remove rotor unit 818 from bearing bracket 330.
3. Push mating ring 433.02 out of bearing bracket 330.
4. Remove circlip 932 (pump sets with impeller type S: remove both circlips 932).
5. Pull off rolling element bearing 321.02.
6. Pull off rolling element bearing 321.01.
7. Take shaft seal ring 421 out of bearing bracket 330.

7.5 Reassembling the pump set

7.5.1 General information/Safety regulations

WARNING



Improper lifting/moving of heavy assemblies or components

Personal injury and damage to property!

- ▷ Use suitable transport devices, lifting equipment and lifting tackle to move heavy assemblies or components.

CAUTION



Improper reassembly

Damage to the pump set!

- ▷ Reassemble the pump (set) in accordance with the general rules of sound engineering practice.
- ▷ Use original spare parts only.

Sequence

Always reassemble the pump set in accordance with the corresponding general assembly drawing.

Sealing elements

- Check O-rings for any damage and replace by new O-rings, if required.
- Avoid the use of assembly adhesives, if possible.

Tightening torques

For reassembly, tighten all screws and bolts as specified in this manual.

7.5.2 Reassembling the pump section

7.5.2.1 Fitting the mechanical seal

Observe the following points to ensure trouble-free operation of the mechanical seal:

- The shaft surface must be absolutely clean and undamaged.
 - Immediately before installing the mechanical seal, wet the contact faces with a drop of oil.
 - For easier installation of bellows-type mechanical seals, wet the inside diameter of the bellows with soapy water (not oil).
- ✓ Shaft 210, shaft seal ring 420 and rolling element bearings 321.01/02 and baffle 17-5 have been properly fitted in bearing bracket 330.
1. Fit the stationary part of mechanical seal 433.02 correctly in bearing bracket 330.
 2. Push the primary ring carefully along the shaft until it rests against the mating ring, using assembly tool 969 (spare parts set).
 3. Press O-ring 412.03 into bearing bracket 330.
 4. Fill in oil.
 5. Slide the rotating part of mechanical seal 433.02 onto shaft 210.

7.5.2.2 Fitting the impeller

Apply Loctite 243 (or similar) to the shaft stub thread and to the bore of impeller type F 230 and screw the impeller onto the shaft with a tightening torque of 2.5 Nm.

CAUTION



Incorrect assembly

Damage to the shaft!

▷ Wait at least 2 hours before starting the pump again.

7.5.3 Checking the connection of motor/power supply

Check the power cables after reassembly. (⇒ Section 7.2.1, Page 37)

7.6 Tightening torques

Table 12. Tightening torques

Thread	Tightening torque (Nm)
M5	2.5
M6	7
M8	30

7.7 Spare parts stock

7.7.1 Ordering spare parts

Always quote the following data when ordering replacement or spare parts:

- Order number
- Order item number
- Type series
- Size
- Year of construction
- Motor number

Refer to the name plate for all data.

Also specify the following data:

- Part number and description
- Quantity of spare parts
- Shipping address
- Mode of dispatch (freight, mail, express freight, air freight)

7.7.2 Recommended spare parts stock for 2 years' operation to DIN 24296

Table 13. Quantity of spare parts for recommended spare parts stocks for two years of continuous operation or 4000 operating hours

Part No.	Description	Number of pumps (including stand-by pumps)						
		2	3	4	5	6 & 7	8 & 9	10 and more
230	Impeller	1	1	2	2	3	4	50 %
321.01	Rolling element bearing, motor end	1	1	2	2	3	4	50 %
321.02	Rolling element bearing, pump end	1	1	2	2	3	4	50 %
420	Shaft seal ring, motor end	2	3	4	5	6	7	90 %
433.02	Mechanical seal, pump end	2	3	4	5	6	7	90 %
99-9	Set of sealing elements	4	6	8	8	9	10	100 %

7.7.3 Sets of spare parts

Table 14. Overview of spare parts sets

Description	Part No.
Rolling element bearing, motor end	321.01
Rolling element bearing, pump end	321.02
Shaft seal ring, motor end	420
Mechanical seal, pump end	433.02
Set of sealing elements	99-9
1 set of circlips	-

8 Trouble-shooting

WARNING



Improper work to remedy faults

Risk of injury!

▷ For any work performed to remedy faults, observe the relevant information given in this instruction manual and/or in the product literature provided by the accessories manufacturer.

If problems occur that are not described in the following table, please call Edincare Pumps on 01442 211554 or email info@edincare.com.

- A Pump is running, but does not deliver
- B Pump delivers insufficient flow rate
- C Excessive current/power input
- D Insufficient discharge head
- E Vibrations and noise during pump operation

Table 15. Trouble-shooting

A	B	C	D	E	Possible cause	Remedy
-	●	-	-	-	Pump delivers against an excessively high pressure.	Re-adjust to duty point.
-	●	-	-	-	Gate valve in the discharge line is not fully open.	Fully open the gate valve.
-	-	●	-	●	Pump is running in the off-design range (low flow/overload).	Check the pump's operating data.
●	-	-	-	-	Pump or piping are not completely vented.	Vent by lifting the pump off the duckfoot bend and lowering it again.
●	-	-	-	-	Pump intake clogged by deposits	Clean the intake, pump components and lift check valve.
-	●	-	●	●	Supply line or impeller clogged	Remove deposits in the pump and/or piping.
-	-	●	-	●	Dirt/fibres in the clearance between the casing wall and impeller Sluggish rotor.	Check whether the impeller can be easily rotated. Clean the impeller, if required.
-	●	●	●	●	Wear of internal components	Replace worn components by new ones.
●	●	-	●	-	Defective riser (pipe and sealing element)	Replace defective riser pipes, replace sealing elements.
-	●	-	●	●	Impermissible air or gas content in the fluid handled	Contact Edincare Pumps.
-	-	-	-	●	System-induced vibrations	Contact Edincare Pumps.
-	●	●	●	●	Wrong direction of rotation	Check the electrical connection of the motor and the control system, if any.
-	-	●	-	-	Wrong supply voltage	Check the mains power supply. Check the cable connections.
●	-	-	-	-	Motor is not running because of lack of voltage.	Check the electrical installation. Contact the energy supplier.
●	-	●	-	-	Motor winding or connection cable are defective.	Replace by new original parts or contact Edincare Pumps.
-	-	-	-	●	Defective rolling element bearing	Contact Edincare Pumps.
-	●	-	-	-	Water level lowered too much during operation	Check level control equipment.
●	-	-	-	-	Temperature control device monitoring the winding has tripped the pump as a result of excessive winding temperatures.	The motor will restart automatically once it has cooled down.

9 Related documents

9.1 General assembly drawing with lists of components


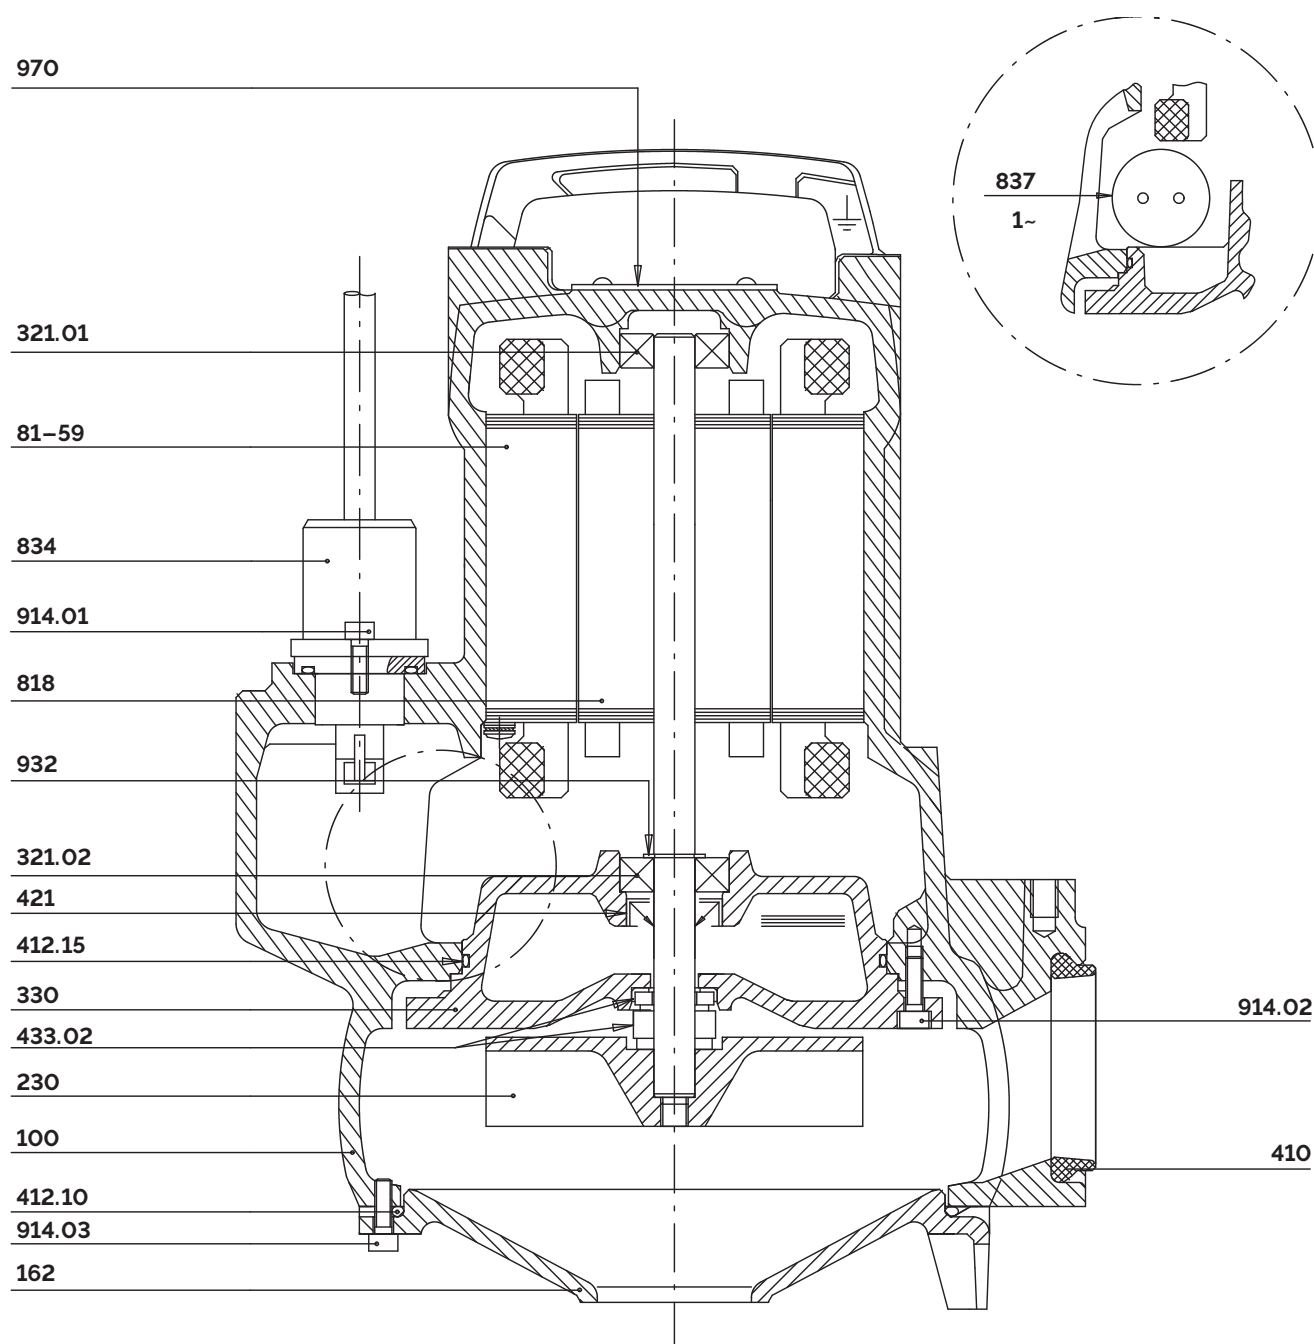


Table 16. List of components

Part No.	Description
100	Casing
162	Suction cover
23-7	Impeller body
230	Impeller
321.01/.02	Radial ball bearing
330	Bearing bracket
410	Profile seal
412.15	O-ring
421	Lip seal
433.02	Mechanical seal
500	Ring
561	(Half round head) Grooved pin
81-59	Stator
818	Rotor
834	Cable gland
837	Capacitor
904	Grub screw
914.X	Hexagon socket head cap screw
932	Circlip
970	Plate

9.2 Exploded view

Figure 15. Exploded view of a Delta Foul V3 Submersible Pump

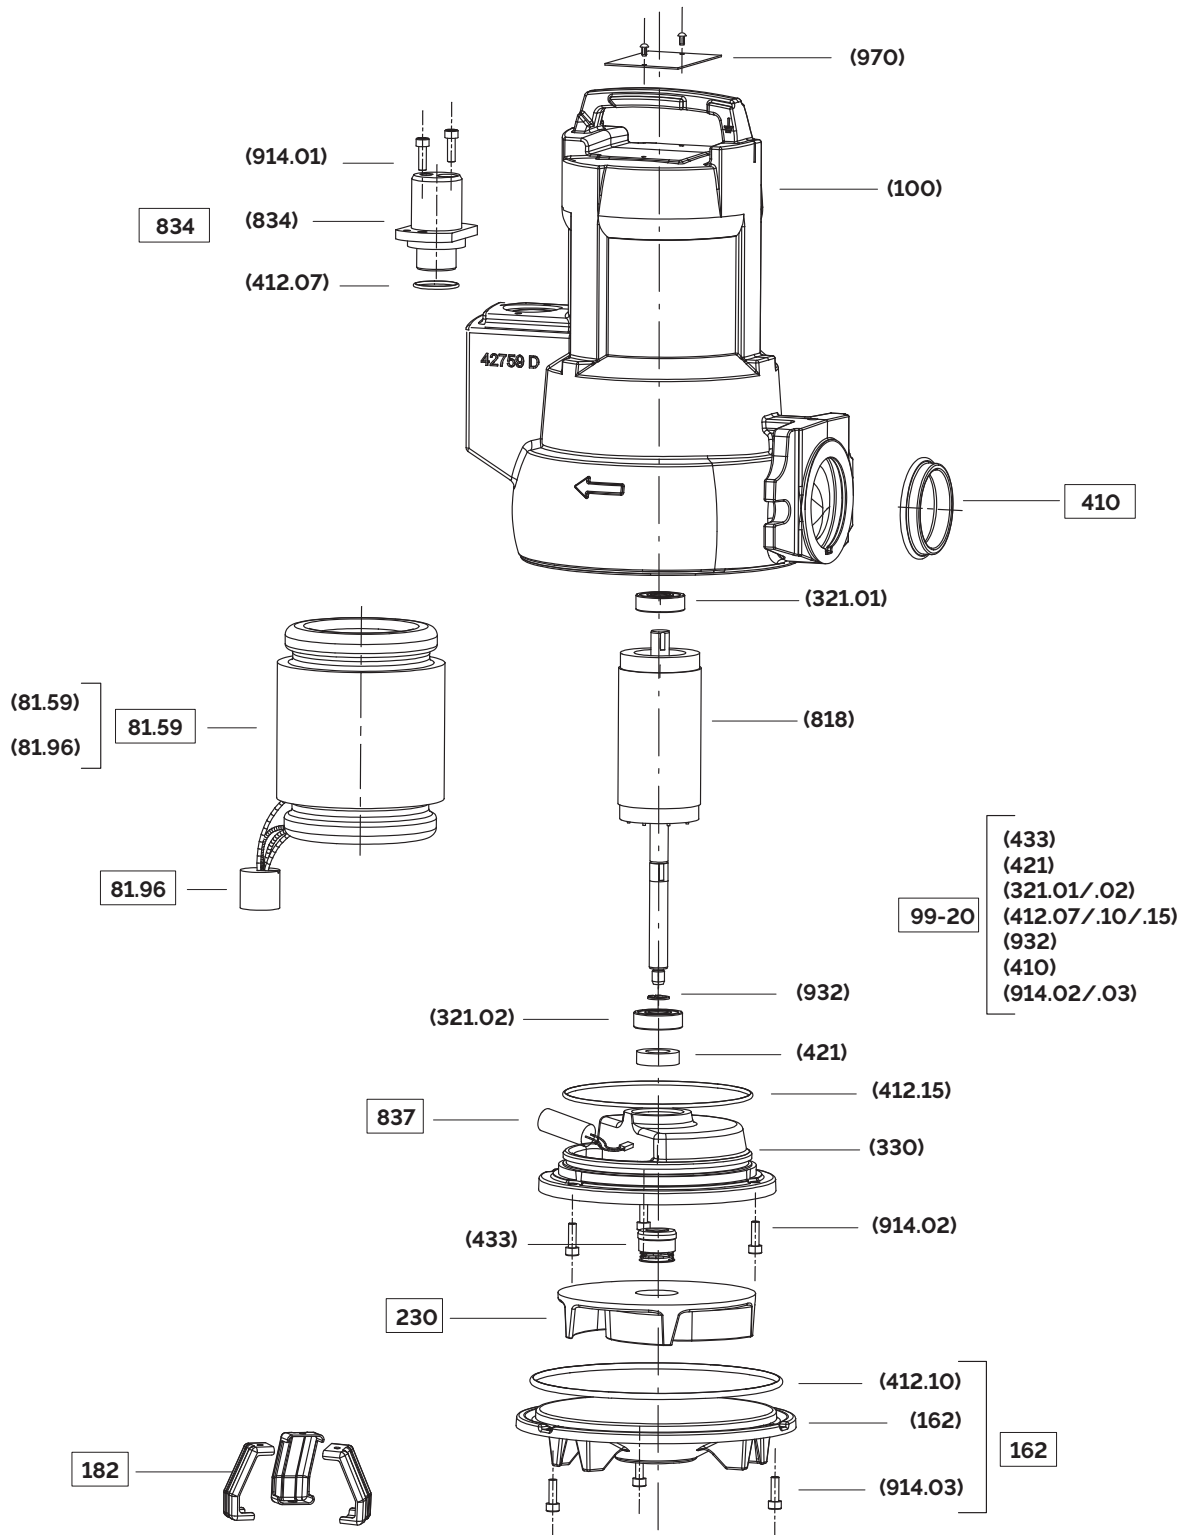

9.3 Wiring diagram

Figure 16. Wiring diagram for an automatic pump (with an integral float)


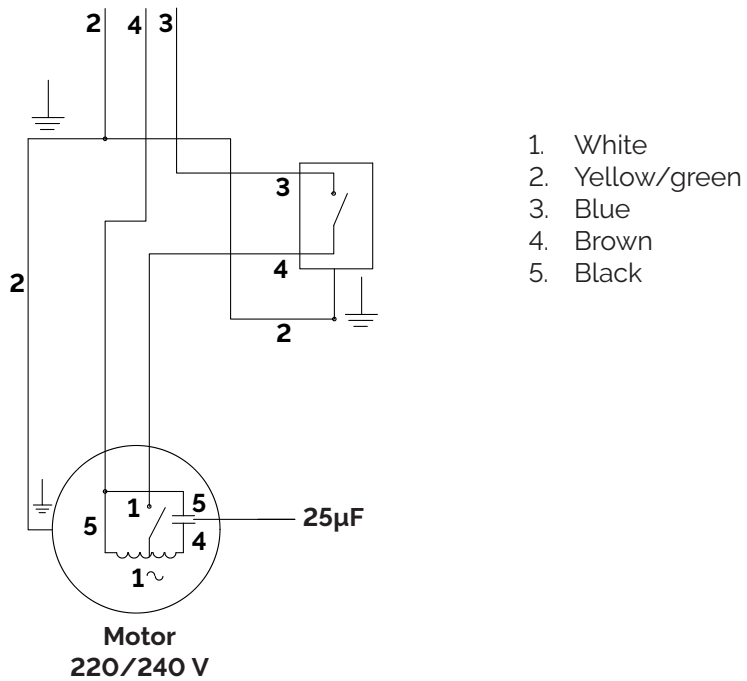


Figure 17. Wiring diagram for a manual pump (controlled by a control panel)

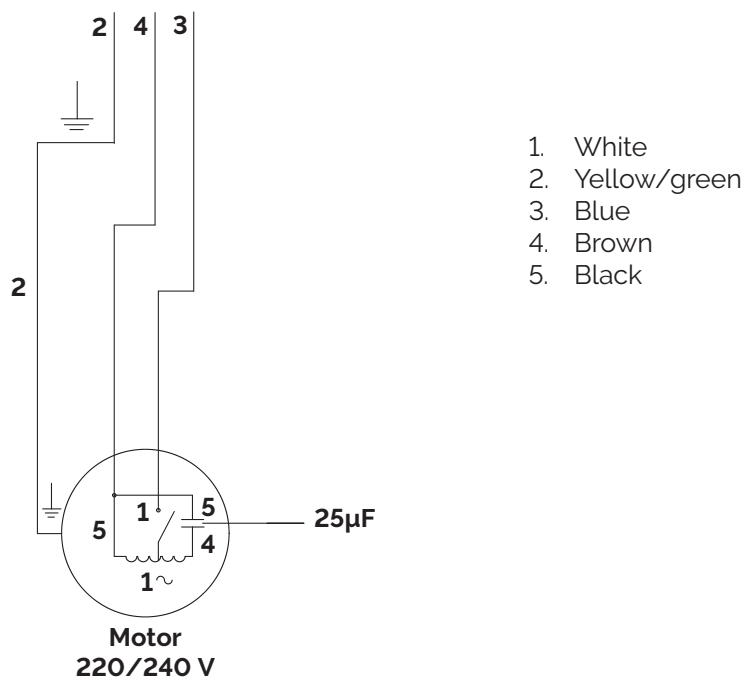

10 EU Declaration of Conformity

We:

**Edincare Pumps, Unit 8, Heron Business Park,
Eastman Way, Hemel Hempstead, HP2 7FW, England**

herewith declare under sole responsibility, that the products

**Delta Foul V3 (Automatic) Submersible Pump (DMS 120, serial number F0001 to F9999)
Delta Foul V3 (Manual) Submersible Pump (DMS E029, serial number M0001 to M9999)**

are in conformity with the provisions of the following Directives and Standards:

Pump set: EC Machinery Directive 2006/42/EC

**Electrical components (where applicable): 2011/65/EU Restriction of the use of
certain hazardous substances in electrical and electronic equipment (RoHS)**

Pump set: Electromagnetic Compatibility Directive 2014/30/EU

We also declare that the following harmonised international standards have been applied:

ISO 12100

EN 809

EN 60034-1, EN 60034-5/A1

EN 60335-1/A1, EN 60335-2-41

This Declaration of Conformity was issued in England on 27 September 2022



Andrew Davies
Director

11 Certificate of Decontamination

Type:

Order number/

Order item number⁹⁾:

Delivery date:

Applications:

Fluid handled⁹⁾:

Please tick where applicable⁹⁾:


☐

Corrosive


☐

Oxidising


☐

Flammable


☐

Explosive


☐

Hazardous to health


☐

Harmful


☐

Toxic


☐

Radioactive


☐

Bio-hazardous


☐

Safe

Reason for return⁹⁾:

Comments:

The product/accessories have been carefully drained, cleaned and decontaminated inside and outside prior to dispatch/ placing at your disposal.

We herewith declare that this product is free from hazardous chemicals, biological and radioactive substances.

For mag-drive pumps, the inner rotor unit (impeller, casing cover, bearing ring carrier, plain bearing, inner rotor) has been removed from the pump and cleaned. In cases of containment shroud leakage, the outer rotor, bearing bracket lantern, leakage barrier and bearing bracket or intermediate piece have also been cleaned.

For canned motor pumps, the rotor and plain bearing have been removed from the pump for cleaning. In cases of leakage at the stator can, the stator space has been examined for fluid leakage; if fluid handled has penetrated the stator space, it has been removed.

- ☐ No special safety precautions are required for further handling.
- ☐ The following safety precautions are required for flushing fluids, fluid residues and disposal:

.....

.....

We confirm that the above data and information are correct and complete and that dispatch is effected in accordance with the relevant legal provisions.

.....

Place, date and signature

.....

Address

.....

Company stamp

Index

Bearings.....	18	Partly completed machinery.....	7
Certificate of Decontamination.....	53	Permissible flange loads.....	24
Commissioning / Start-up.....	30	Piping	23
Design.....	18	Preservation	15
Designation.....	17	Reassembly.....	42
Dismantling.....	40	Return to supplier	16
Disposal.....	16	Safety	9
Drive.....	18	Safety awareness.....	10
Electrical connection.....	28	Scope of supply.....	20
Event of damage.....	14	Sensors.....	27
Explosion protection.....	29	Servicing.....	35
Fields of application	10	Shaft seal.....	18
Impeller type.....	18	Shutdown.....	33
Installation.....	18	Spare parts stock.....	44
Intended use	10	Start-up	30
Intervals.....	36	Storage	15, 33
Key to safety symbols/markings.....	9	Supply voltage.....	32
Level control system.....	27	Tightening torques	44
Lubrication	38	Transport	14
Maintenance work.....	36	Trouble-shooting.....	46
Measure the insulation resistance	37	Warnings	9
Oil quality	38	Warranty claims.....	7
Ordering spare parts	44		
Other applicable documents.....	7		
Overload protection.....	28		

