


Hydraulic Valve

Installation guide

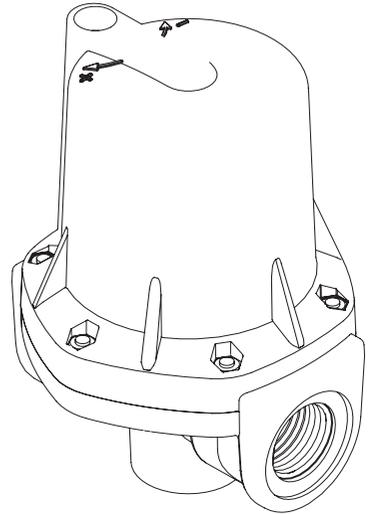

Please keep this booklet for future reference.

Installer, when you have read these instructions
please ensure you leave them with the user.




1. Introduction

The Hydraulic Valve is an automatic urinal flush control valve. The valve uses a simple patented mechanism which prevents water waste by ensuring that the auto-flush cistern is only filled, and can only flush, when the washroom is used.

The Cistermiser Hydraulic Valve is installed on the supply pipe to the urinal cistern. The valve is activated by short-term pressure drops created by use of taps or WCs on the same supply. The valve is normally closed; when it is activated, it allows water to pass to the urinal cistern until the internal pressures inside the valve stabilise. When the cistern is full the auto-siphon will flush. The length of time the valve takes to close can be set by the installer.

Parts


1. Valve
2. Key
3. Hygiene flush attachment (optional)

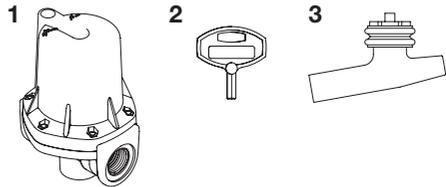

Product diagram





The Cistermiser Hydraulic Valve consists of three main elements as shown here:

- 1 Diaphragm operated valve which, when opened, allows water to pass to the urinal cistern.
- 2 Hydraulic accumulator, pressurised to the supply pressure, keeps pressure on both sides of the diaphragm equal and valve closed. When pressure on the inlet (supply) side is reduced, as other services are used, the pressure imbalance causes the valve (1) to open.
- 3 Adjustment (restrictor) screw which can be set during installation to determine the volume of water discharged into the cistern at each operation by altering the duration of the 'open' period.


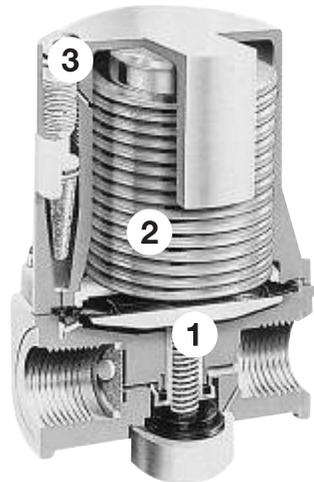


2. Positioning (valve orientation)

YES

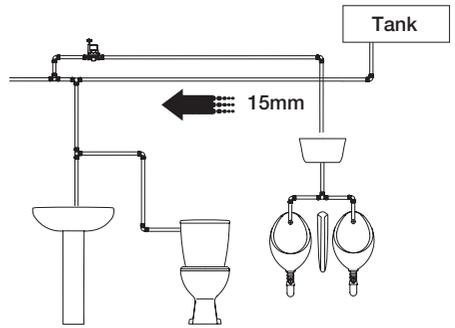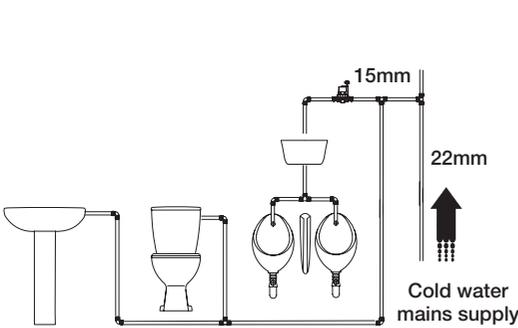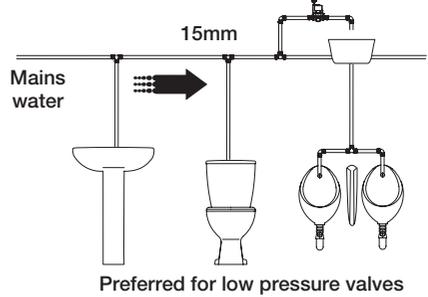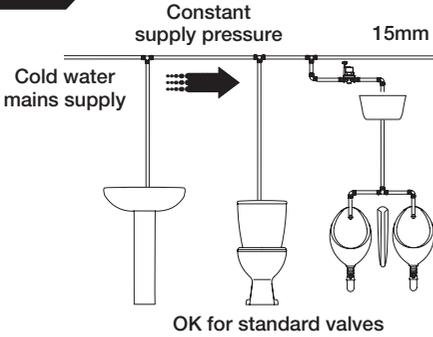


NO

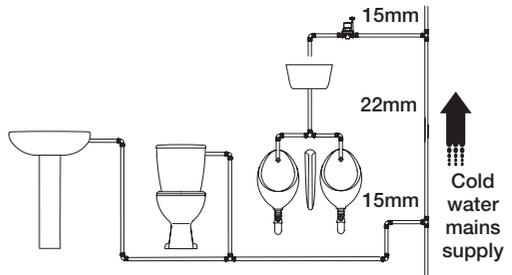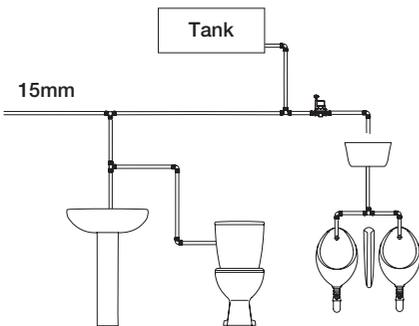

3. Installation schematic

STD & LP valves installed horizontally **A** or vertically **B**.

HSLP valves must be installed in an upright position on a horizontal pipe **A**.

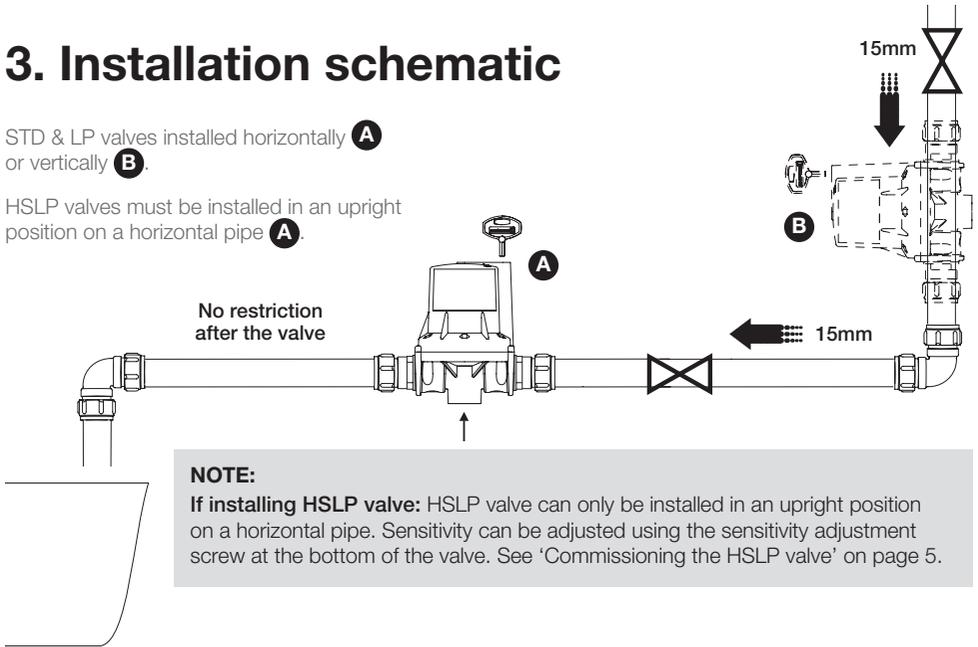

NOTE:
If installing HSLP valve: HSLP valve can only be installed in an upright position on a horizontal pipe. Sensitivity can be adjusted using the sensitivity adjustment screw at the bottom of the valve. See 'Commissioning the HSLP valve' on page 5.

4. Commissioning

Commissioning the STD & LP Valve

1. Trapped air must be vented from the valve. Restrict the water supply and, using the red key (2) supplied, unscrew the restrictor screw (anti-clockwise) to reveal the 'O' Ring.
2. Increase the water supply until all trapped air has been exhausted and water runs freely from the restrictor.
3. Turn the restrictor screw clockwise until the top is flush with the outer body of the valve (On STD models it may be necessary to turn down the water pressure momentarily to ensure the pressure does not cause the 'O' Ring to become dislodged from the restrictor).
4. Wait approximately one minute for the valve to charge up. Turn the restrictor three and a half complete turns clockwise so that it is recessed into the valve body. The valve is now ready. Turn on a hand basin tap or flush a WC on the same 15mm supply and the valve will open.
5. To increase the time that the valve remains open once activated, turn the restrictor screw clockwise. This will allow more water to enter the cistern at each operation and increase cistern flushing frequency. This should be set according to the number of urinals served / size of cistern and the number of activations desired between flushes.

Commissioning the HSLP Valve

The HSLP valve MUST be on the horizontal pipe run and installed in the upright position. Follow instructions 1 to 5 above.

There is an additional venting nut on the top of the valve.

Sensitivity can be adjusted using the sensitivity adjustment screw at the bottom of the HSLP valve.





Hygiene flush attachment (for use with STD & LP valves only)

The hygiene flush attachment permits a slow drip into the cistern to initiate a flush approximately every 12 hours. For correct operation it is essential that the siphon of the auto flushing cistern does not leak.

Remove the black plastic plug from the bottom of the Hydraulic Valve using circlip pliers: the plug is no longer required but take care to retain the spring.

Insert the hygiene flush attachment in place of the plug making sure to align it to the hexagon shaped end.

When fully engaged secure the circlip and adjust the drip into the cistern to the required rate with the allen key provided.

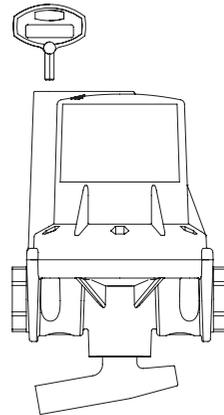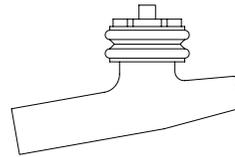

5. Power connection

There are no power requirements because the valve is activated by pressure fluctuations within the water supply.

6. Usage advice and specification

Choosing the right valve for your application

There are three models in the range of Hydraulic Valves, each suited to different water supply pressure. The table below will help to specify the right model for your application.

Standard valve (STD) and standard valve with hygiene flush (STDIF)

(Blue colour coded packaging)

Supply: Mains water pressures 0.5 bar to 6 bar or tank-fed systems above 5m head

Operating sensitivity: 15% of supply pressure

Low pressure valve (LP) and low pressure valve with hygiene flush (LPIF)

(Green colour coded packaging)

Supply: Tank-fed systems, 3m to 5m head

Operating sensitivity: 20% of supply pressure


High sensitivity low pressure valve (HSLP)

(Orange colour coded packaging)

Supply: Tank-fed systems, 0.5m to 3m head

Operating sensitivity: 20% of supply pressure

7. Component dimensions

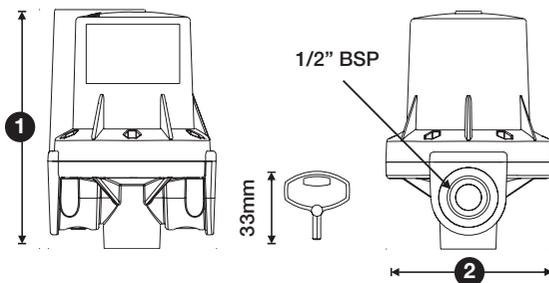

	1	2
Standard Valve (STD)	116mm	81mm
Low Pressure Valve (LP)	116mm	81mm
High Sensitivity Low Pressure Valve (HSLP)	130mm	112mm

8. Frequently asked questions

There is a continuous flow of water through the valve

The valve has been installed in reverse	Remove the valve and fit with arrow (located at the base of the valve) in the direction of water flow.
Water pressure too high for valve: may crush bellows	Purchase a valve suitable for your water pressure.
Valve is being triggered by a drop in pressure from another room	Change pipework or change valve to a Cistermiser IRC which can be powered by either batteries or mains electricity.

The valve is permanently closed

Water supply	Ensure water supply is turned on and is reaching the valve.
Restriction on the outlet of the pipework into the cistern	The pipework after the valve should have no other valves or petcocks fitted and should be open ended: anything fitted after the valve can cause back pressure which stops the valve from opening.
No draw-off point. Is there a draw-off point that will activate the valve on a common 15mm supply pipe?	Change pipework or change valve to a Cistermiser IRC which can be powered by either batteries or mains electricity.
Water pressure too low for valve	Change valve to one suitable for the water pressure on site.
Valve not vented	The valve requires to be vented as per the commissioning instructions; trapped air will cause a malfunction.
Restrictor screw adjustment incorrect	The restrictor screw should be approx 3.5 turns (for STD and LP) and 2 turns (for HSLP) below the level of the main valve on initial installation (not flush or above the valve body).
Sensitivity screw adjustment incorrect (HSLP ONLY)	Unscrew the brass cap turn anti-clockwise to increase sensitivity.
Pipework. Is all pipework between the draw-off point (which is activating the valve) and the valve in 15mm? If the pipework is larger than 15mm the ability to detect a pressure drop will be reduced	Change pipework or change valve to a Cistermiser IRC which can be powered by either batteries or mains electricity.

The valve is permanently closed

Valve installed too far away from draw-off point. The valve must be no further away than 5m from the draw-off point. Distance reduces the ability of the valve to sense pressure changes	If possible move the valve/draw off point closer together. Change pipework or change valve to a Cistermiser IRC which can be powered by either batteries or mains electricity.
Draw-off points used to activate the valve. Are the taps mixer or aerated? Such taps do not always register a significant pressure drop and may not activate the valve	Purchase a Cistermiser IRC valve which does not rely on pressure drops and can be powered by either batteries or mains electricity.
Water supply is pressurised or pumped. A supply that immediately makes up a pressure loss as services are used reduces the capability of the valve	Install a Cistermiser IRC.

Flow through valve is inadequate/too great

Restrictor screw adjustment incorrect	Turn the restrictor screw clockwise to increase the volume of water allowed though with each activation of the valve and anti-clockwise to decrease. If this has no effect then a Cistermiser IRC valve, which does not rely on pressure drops, should be installed. The IRC can be powered by either batteries or mains electricity.
--	---

Faulty valve or installation error

You have tried the above FAQs and the valve is still not working	Remove pipework from the outlet side of the valve, put your thumb over the outlet and activate the draw-off. If you feel a slight suction there may be a fault with the valve and you should contact Cistermiser Ltd.
The valve is leaking	The leak is coming from the join with the pipework. The bonded seal may have slipped out during installation. Ensure the bonded seal is fitted before tightening pipework.

Cistermiser product warranty and extended warranty

Cistermiser products are guaranteed for 12 months from the date of manufacture. The guarantee is for faulty products and parts only: there is no labour warranty. If you believe your product is faulty, please either contact Cistermiser directly on **0118 969 1611** or at **support@cistermiser.co.uk**, with a photograph and the serial number, to help diagnose the cause of the problem.

The warranty on Cistermiser products can be extended within one year of date of manufacture, at no cost, to three years from the date of installation (see details on page 9). Please make a note of the serial number and take a photograph of the installation before you leave site.

Commissioning check-list

Hydraulic Valve

3 YEAR
extended
warranty

The warranty on Cistermiser products can be extended within one year of date of manufacture, at no cost, to three years from the date of installation. Once the valve has been installed, complete the product commissioning checklist below to demonstrate compliance with the installation instructions. Email a photograph of this completed form to warranty@cistermiser.co.uk or post to Cistermiser, Unit 1, Woodley Park Estate, 59-69 Reading Road, Woodley, Berks, RG5 3AN.

Product serial number

Installation address

Installer's name

Telephone number

Email address

No	Activity	Checked	Date
1.	Flush pipework prior to installation.	<input type="checkbox"/>	<input type="checkbox"/>
2.	Check the valve is suitable for the incoming water pressure. STD 0.5 – 6 Bar, LP tank-fed 3 to 5 metre head, HSLP tank-fed 0.5 to 3 metre head.	<input type="checkbox"/>	<input type="checkbox"/>
3.	NOTE: HSLP can only be mounted horizontally. Ensure an isolation valve is installed for servicing.	<input type="checkbox"/>	<input type="checkbox"/>
4.	Ensure the valve is installed in the correct flow direction.	<input type="checkbox"/>	<input type="checkbox"/>
5.	Check the valve is installed on common supply to washroom (valve operates on the pressure drop caused by other services being opened).	<input type="checkbox"/>	<input type="checkbox"/>
6.	Check the valve is supplied by 15mm pipework; larger pipework will reduce the valves ability to sense a pressure drop.	<input type="checkbox"/>	<input type="checkbox"/>
7.	Ensure the valve is installed no more than 3 metres from the draw-off point.	<input type="checkbox"/>	<input type="checkbox"/>
8.	Ensure there is no restriction after the valve.	<input type="checkbox"/>	<input type="checkbox"/>
9.	Vent the valve by removing the restrictor screw until all air is removed.	<input type="checkbox"/>	<input type="checkbox"/>
10.	STD & LP valves: turn the restrictor screw clockwise approximately 3 1/2 turns. HSLP valve: remove brass cover and adjust sensitivity adjustment screw.	<input type="checkbox"/>	<input type="checkbox"/>
11.	Check operation: ensure valve operates accordingly to the number of urinals served/ size of cistern and the number of activations desired between flushes.	<input type="checkbox"/>	<input type="checkbox"/>

Cistermiser range

Urinal flushing



Hydraulic Valve

An automatic urinal flush control valve which reduces water consumption. The valve uses a simple patented mechanism which prevents water waste by ensuring that the auto-flush cistern is only filled, and can only flush, when the washroom is used.



Infrared Control (IRC) Valve

This valve automatically manages the water supply to the urinal cistern and reduces water consumption by up to 80%. The PIR sensor detects movement and activates the solenoid valve, allowing water into a urinal cistern.



Direct Flush Valve

An infrared sensor controlled urinal valve. It automatically flushes individual urinals after use, ensuring the highest level of hygiene from the minimum volume of water.

WC flushing



Easyflush Wave

An infrared, hands-free and water-conserving WC cistern flush valve suitable for concealed or exposed cisterns. Easy to install in retrofits or new installations, its no-touch dual flush WC cistern valve promotes water economy and hygiene in domestic and commercial washrooms.



Easyflush Walkaway

An infrared controlled automatic WC cistern flush valve that is suitable for concealed cisterns. The valve flushes once the user exits the cubicle. Ideal for use in environments where hygiene and water economy are concerns.



Easyflush Direct

An infrared electronic flushing system that removes the need for a WC cistern by taking its water feed straight from the mains supply. Ideal for high traffic areas as the system allows for a second flush without a delay.

Taps & spouts



Novatap/Vectatap

A range of infrared taps which promote hygiene and reduces maintenance costs. They are contemporary deck-mounted chrome basin spouts with infrared sensor, control unit and an internal (Novatap) or external (Vectatap) valve, making them extremely simple to install.



Vectaspout

A polished stainless steel panel-mounted basin spout. The infrared control reduces water and energy usage and stops dripping or the risk that the tap may be left running. It is completely hands-free and reduces cross contamination.



Novaspout

Helps improve water and energy efficiency with its automatic shut-off, eliminating the risk of dripping or taps left running. It is an elegant panel-mounted polished stainless steel basin spout supplied with an infrared sensor control unit and valve.

Washroom control systems



Anti-vandal range

Our specialist vandal-resistant range of touch-activated washroom controls; for use in high risk or demanding public environments, such as prisons, secure hospitals, schools and sports facilities.



Sensazone

An innovative system to conserve water and energy. Occupancy is monitored by sensors; when someone enters the washroom all services controlled by Sensazone are activated – the hot and cold water, lighting and extractor fans.

Davidson Holdings' brands

Salamander Pumps

Salamander is one of the UK's leading manufacturers of pumps for boosting water pressure for showers, bathrooms and whole house supply in domestic and small commercial tank-fed systems.

www.salamanderpumps.co.uk



Keraflo manufacture delayed action float valves, which provide an accurate and effective method of controlling the level of stored cold water in tanks both with and without raised float valve chambers. The range is used in domestic, commercial and industrial applications worldwide.

www.keraflo.co.uk



Homeboost is an intelligent pump from Salamander Pumps that recognises when water flow is less than 12 ltrs/min and automatically boosts the performance of the incoming mains water up to 12 ltrs/min.

www.home-boost.co.uk

PENDOCK

Pendock manufacture solutions to the challenges of enclosing structures and perimeter casings for building interiors. The range includes pipe boxing, column and HVAC casings, radiator covers and washroom cubicles.

www.pendock.co.uk



Talon is the UK market leader in the manufacture and supply of plastic pipe clips, pipe collars and fixing plugs, plus a range of cover profiles for concealing pipework.

www.talon.co.uk



Combimate is a domestic limescale prevention device that prevents limescale build-up and soft water corrosion in combination boilers and other domestic hot water appliances.

www.combimate.co.uk



Fuelstop TFV is an overheat protection device that shuts off supply to fuel burning appliances. The FuelStop TFV complies with British safety standards and, unlike other fire valves, it is filled with liquid not gas, reducing nuisance trips.

www.fuelstop.co.uk

Cistermiser Limited

Unit 1, Woodley Park Estate, 59-69 Reading Road, Woodley, Reading, Berkshire RG5 3AN
t: +44 (0) 118 969 1611 f: +44 (0) 118 944 1426
e: sales@cistermiser.co.uk www.cistermiser.co.uk