


OPTIMISED CLEAN-OFF ZONES TO AVOID BRINGING DIRT INTO BUILDINGS

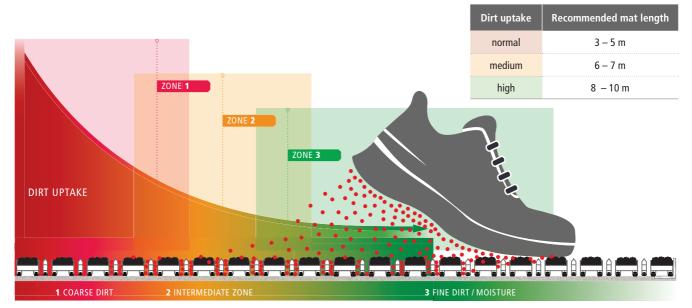

ZONE 2	
2 Intermediate Zone for heavily frequented Entrance Areas	
Outdoor Area	
Indoor Area	

ZONE 3	
3	Fine Dirt and Damp Dirt Collecting Area
	Indoor Area



The length is vital, as the longer the mat, the more dirt it absorbs and therefore the lower the cleaning costs.

EXAMPLES OF USE



Ribbed Carpet



Ribbed Carpet and Brush Strip



Grooved Rubber



Grooved Rubber and Cassette Brush



Ribbed Carpet and Scraper Bar



Ribbed Carpet and Cassette Brush



Grooved Rubber and Brush Strip



Cassette Brush

