

# GRP Developer Chimney

## Fixing Instructions



### STORAGE

brickfabrication GRP developer chimneys should be stored in a secure area, upright on the pallet provided and protected from wind and rain. **No aerials or satellite dishes are to be fixed to the chimney in any circumstance**

### ROOF PREPARATION




A structurally suitable surface should be provided. A minimum of 12mm ply secured to noggin, levelled and adequate for the footprint of the chimney.



Fit extra layers of roof membrane to sit the chimney on, allowing suitable overlaps for lapping over the complete membrane.

### LIFTING & POSITIONING

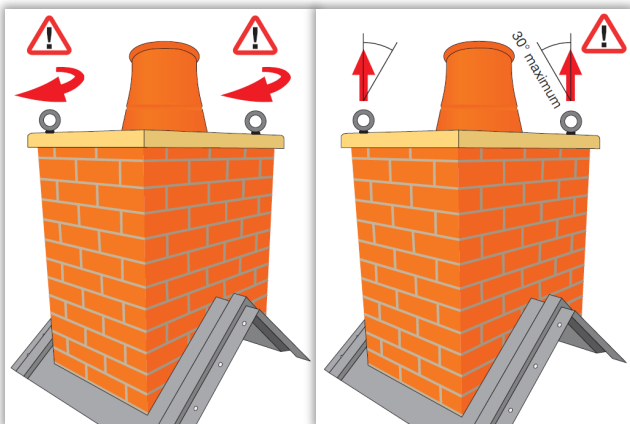

Fit the provided lifting eyes to chimney cap and fully tighten.  
Ensure any lifting equipment is suitable for the load.



Lift and align chimney onto roof. Fit suitable lead flashing under chimney if not pre leaded with Fast Lead System™.


**INSTALLATION**



Secure chimney using screws provided in the fixing kit.  
Fit main roofing membrane.



Fit batten and flashing support to leading edge of chimney  
on each side, ensuring fall to prevent ponding.

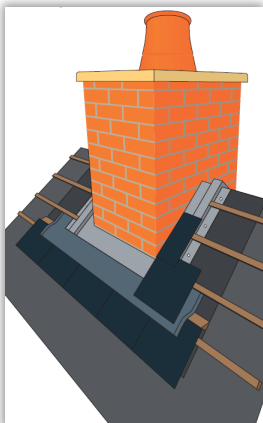


Batten roof, run battens to outside edge of the flashing channel.  
Ensure batten ends are notched out to prevent uplift of tiles.



Tile up to leading edge of chimney of the chimney.  
Ensure lead is fully supported before dressing down over tiles.



Complete tiling up to the sides of the chimney, ensuring the  
secret gutter is fully covered.

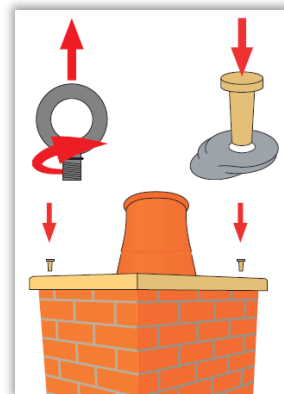

Remove lifting eyes and apply sealant to sockets before fitting  
sealing bolts to complete installation.



**brickfabrication**  
prefabricated building solutions

Gemini Works  
Estate Road  
Pontypool  
Torfaen  
NP4 6YW

TECHNICAL HELPLINE

**01495 759555**

Email: [sales@brickfabrication.co.uk](mailto:sales@brickfabrication.co.uk)

[www.brickfabrication.co.uk](http://www.brickfabrication.co.uk)

Tel: 01495 759555  
Fax: 01495 759874

