

Lockers



Before

After

Replacement Front Installation Instructions

The following instructions outline typical installation requirements for Replacement Front lockers. The design of the host or existing locker will vary and therefore may affect the application of these instructions. These instructions are to be used as a guide and may need to be modified in some cases.

hadrian
toilet partitions and lockers

www.hadrian-inc.com

Installation Instructions

Part 1 - Tools Required

- Sheet metal vice grips (2 pair)
- Shims
- 12" (305mm) magnetic level
- Cordless drill
- Min. 48" (1219mm) magnetic level

Part 2 - Removal/Preparation of Existing Lockers

1. Remove existing doors.
2. Remove existing hasps / strikes as required.
3. Remove existing hinges as required (note that the front face of the host locker must be flush, providing an unobstructed flat surface for placement of Hadrian's Replacement Front locker).

Part 3 - Installation

1. Starting at the beginning of a row of lockers, offer up Hadrian Replacement Front locker to existing locker. Making use of the 12" level on top and the longer level positioned on the side, ensure that the Replacement Front is centered on the existing locker and plum.
2. Using the #2 Robertson bit provided, install the first fastener (#10-3/4") through the elongated ventilation slot at the top of the locker closest to the wall. These screws will self-drill through the mounting plate and into the frame member of the existing locker.
3. Check that locker is level again and install 2nd fastener located adjacent to the first fastener.
4. Install the remaining fasteners through the 3 other locations along one side of the locker. One side of the locker (either the strike or hinge side) should be completely fastened, true, and level at this point.

Installer Tip:

Measure the distance inside the replacement frame at the top of the locker and cut a piece of 2 x 4 to suit this distance. This gauge block will be used to set the proper distance at the center of each locker for proper operation of the door and lock.

Replacement Front Installation Instructions cont'd

Part 3 - Installation continued...

5. Shim the locker along the floor or base as required.
6. Install the gauge block (recommended in "Installer Tip ") at the center of the locker. Hold in place by applying pressure to the frame.
7. Install balance of screws through openings provided.

IMPORTANT NOTE:

It is critical that the first locker in each bank is installed perfectly level and directly on top of the existing locker. The balance of the lockers will be affected by any deficiencies with this first locker.


Part 4 - Replacement Front Banking

1. Offer up the second Replacement Front adjacent to the first locker installed.
2. Open both doors and clamp both frame members together at the top of the lockers using sheet metal vice grips. Apply the other pair of sheet metal vice grips at the bottom of the locker in the same fashion.
3. Assuming the first locker was perfectly plum, monitor the level along the top of the locker and install fasteners to the jamb attached by the clamps.
4. Install the gauge block centrally into the second locker. While ensuring the locker is level, set the gap between the frame and install the balance of the screws (4) along the opposite jamb.
5. Remove clamps and check for proper operation of the door.
6. Repeat steps 1 - 5 above for all remaining lockers.

Part 5 - Installing Shelf Cover Plates (optional)

For situations where the existing shelf must be extended to reach the replacement front frame, a shelf cover plate is required. Installation is as follows:

1. Place Hadrian Cover Plate over existing shelf.
2. Drill and rivet Hadrian's Cover Plate to the existing shelf through holes provided.

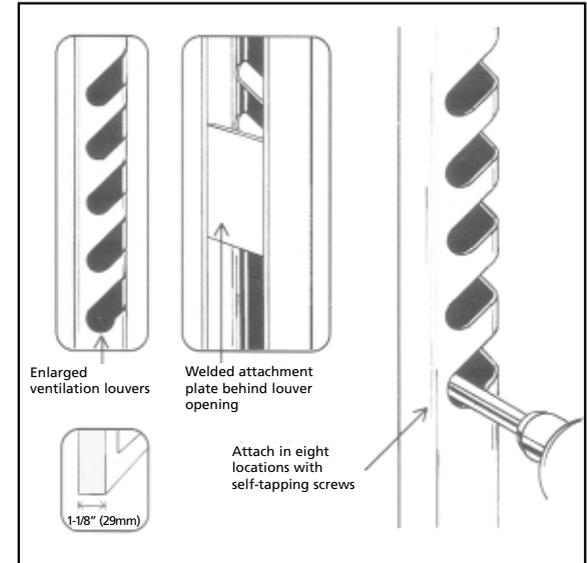

Replacement Front frame details

Hadrian Manufacturing Inc., 965 Syscon Road, Burlington, Ontario L7L 5S3
Tel: 905-333-0300 • Fax: 905-333-1841 • Canada toll free fax: 1-888-817-7701

Hadrian Inc. 7420 Clover Avenue, Mentor, Ohio 44060
Tel: 440-942-9118 • Fax: 440-942-9618 • U.S. toll free fax: 1-800-536-1469

www.hadrian-inc.com