



...wedi®

Handily packaged in a single box

The shower tray sealing set from wedi contains all products for the installation of a shower tray in a wide range of sizes. It is developed for the sealing of all types of shower trays (e.g. made of synthetic resin, ceramic or acrylic) to adjacent wall and floor surfaces and can be used both in new build and renovation projects. It is suitable to use for flush to floor as well as floor-mounted installations.

Benefits












Installation variants

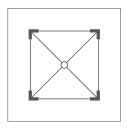




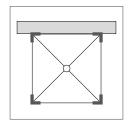

Against wall

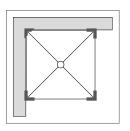

In the corner

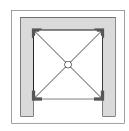

Enclosed






Easy and quick to assemble




At the beginning of the installation, mark the shower tray to indicate the height difference between the subfloor and the tile surface - for this, take the height of the floor tile and the tile adhesive into an account.

Apply the butyl strip part of the sealing corners to the outer edges of the tray under the mark.

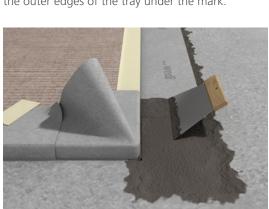

Apply wedi 520 sealant to the adjacent surfaces. Fold the tape into the 520 sealant, then apply another layer of sealant on top, ensuring to fully embed the tape.

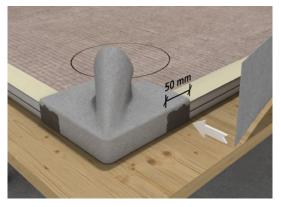


Apply the 520 sealant to the back of the sealing corners, then apply the sealing tape with a 50mm overlap to the corners.

Press firmly together and continue applying the butyl strip part of the sealing tape around the tray, under the mark.



Now fold the sealing corners into the 520 sealant, and apply another layer of sealant on top, ensuring to fully embed the corners as well.

wedi system structure

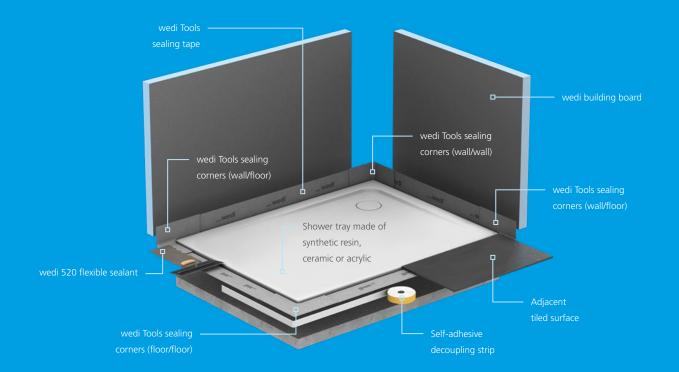

The shower tray sealing set contains:

- 1 × wedi 520 powder component, 2.4kg
- 1 × wedi 520 liquid component, 1.2kg
- 1 × wedi Tools butyl tub sealing tape, 10m
- 1 × Self-adhesive decoupling strip, 10m
- 2 × wedi Tools butyl sealing corner wall
- 4 × wedi Tools butyl sealing corner floor



- Unit 4 Mercury Park, Mercury Way Trafford Park, M41 7LY Great Britain
- **\(+** 44 161 864 2336
- ☑ info@wedi.co.uk
- www.wedi.co.uk

