What if comfort fits in the smallest of spaces ...

wedi Sanoasa® corner seats
Ready-to-install seat elements for the shower




...wedi®

Compact solution, elegant design

Seated showering even in the smallest of spaces? wedi Sanoasa corner seat elements can be added even to an existing, finished shower offering a simple yet stylish, convenient solution. You have the choice between the standard version which can be individually tiled according to your taste, and the exclusive version with a seamless, factory-fitted wedi Sanoasa Top design surface in pure white which, thanks to the absence of grout lines and the antibacterial finish, is hygienic and easy to maintain. Both corner seat variants impress with their **triangular, self-supporting construction, which is ideal for small bathrooms.** They not only provide seating, but also offer a practical storage area, e.g. for shower gel, shampoo or shaving accessories. For older generations, they are also an aesthetic and space-saving alternative to conventional shower chairs.

Technically, the corner seat elements convince with their high stability and load capacity of up to 150 kg. They can be installed both during construction of the shower and also later after tiling – easily, quickly and securely. Depending on the type of installation, they are fully operational within a minimum of 12 and a maximum of 24 hours. Experience the wedi quality made in Germany.

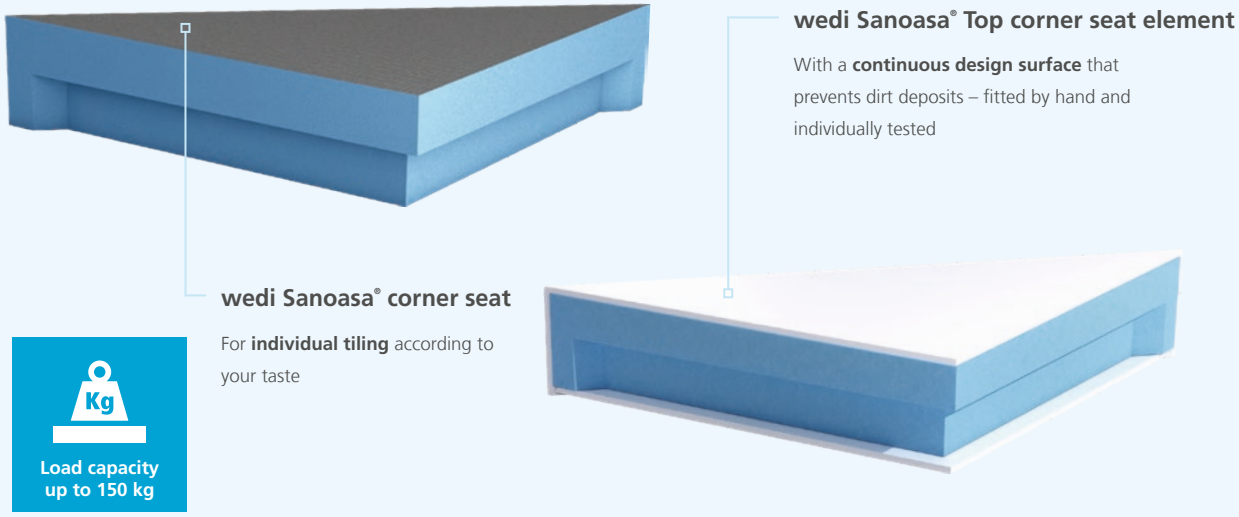

The advantages of both seat elements at a glance

- Elegant seating or practical storage in the smallest of space
- Low weight with high stability: up to 150 kg, suitable for all generations
- Can also be retrofitted in finished bathrooms – simple, quick and secure
- Install with adhesive or screw in - usable after 24 hours at the latest
- Available in two sizes, M and L
- High quality German products made by wedi







Easy & quick to install – even on tiled surfaces

Whether during construction before tiling or in an existing finished shower – you can install both versions quickly and easily. Simply glue or screw the base elements onto the wall surface, glue the corner seat onto them and tile if necessary. Done!






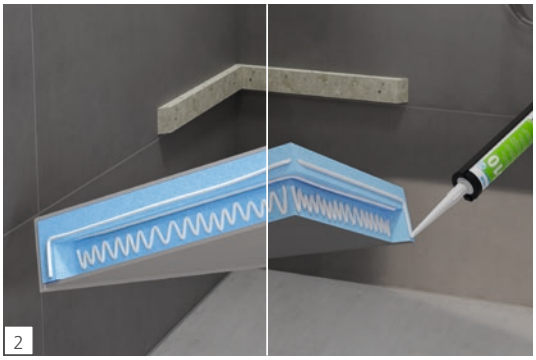

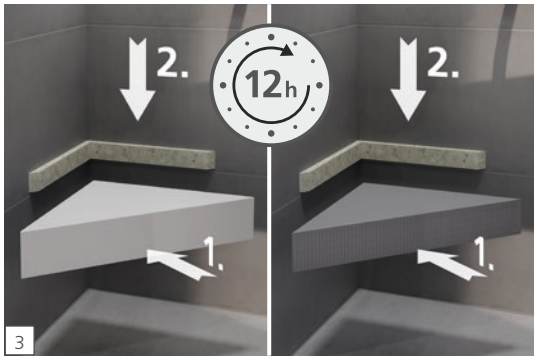


wedi Sanoasa® corner seat element

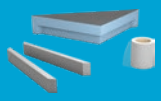

	Length × seat depth × thickness	Order no.
Size M	600 × 300 × 100 mm	073784302
Size L	800 × 400 × 100 mm	073784402

wedi Sanoasa® Top corner seat element ▪ monochrome look, mineral material, pure white

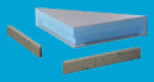

	Length × seat depth × thickness	Order no.
Size M	603 × 300 × 108 mm	076447600
Size L	803 × 400 × 108 mm	076447601

...wedi®

Unit 4 Mercury Park, Mercury Way
Trafford Park, M41 7LY
Great Britain

+ 44 (0) 161 864 2336
info@wedi.co.uk
www.wedi.net

THIRD-PARTY VERIFIED EPD ISO 14025 and EN 15804 Institut Bauen und Umwelt e.V.

ZABABC V1 Subject to technical modifications. Images similar.

UK