

# TRANSITIONS (BEVEL STRIPS & RAMPS / DUAL & RAMPED EDGE JOINT COVERS / TOPLINE FLOOR TRIMS / COVER JOINTS)

## Product Description

PVC Transition profiles are used widely in commercial and public buildings. They are designed to protect the edge of floor coverings from damage, reduce trip hazards and provide a smooth transition at joints between different floor coverings. For technical information please email [technical@quantum-ps.co.uk](mailto:technical@quantum-ps.co.uk).

## Dimensions

Profile lengths vary depending on profile, for profiles lengths please visit [www.quantumflooring.co.uk](http://www.quantumflooring.co.uk).

## Tops (QTL36/ QTR42/ QTR45 Colour Range

Inc. Light Reflectance Value (LRV)

6	Black	11	Spruce
10	Rustic	15	Flint
10	Peat	26	Light Grey
11	Regency		

## Trims/ Ramps/ Bevels Colour Range


Inc. Light Reflectance Value (LRV)

6	Black	29	Cloud Grey
7	Dark Brown	81	White
15	Charcoal		


**Note:**  
Can't find the colour you are looking for?  
We offer a colour matching service (subject to volumes) call our customer care team on +44 (0) 161 627 4222 to find out more.

## Range


### Topline Floor Trims

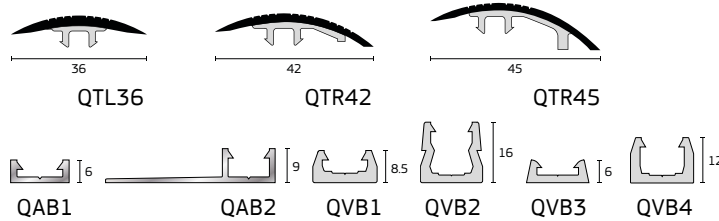


### Bevel Strips

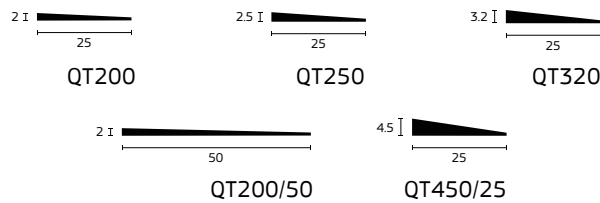


### Ramps

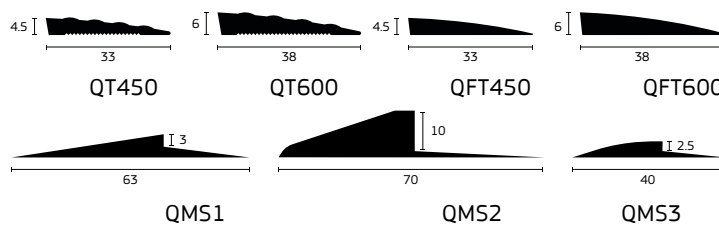


### Dual Edge Joint Covers

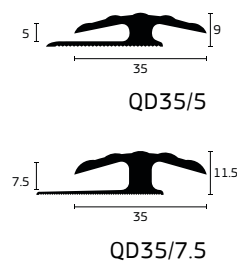

### Ramped Edge Joint Covers

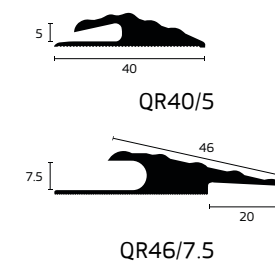

### Cover Joints & Shower Threshold

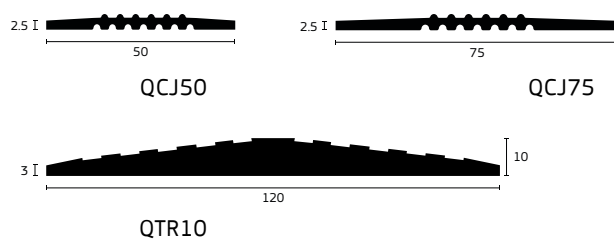

## Technical Data

### Product Composition

#### Flexible Products:

Polyvinylchloride (PVC)

#### Rigid Products:

Unplasticised Polyvinylchloride (UPVC)

(Plasticisers)

Inert fillers

Flame retardants

#### QAB1 & QAB2:

Aluminium Alloy

### Physical and Chemical Properties

**Form:** solid / rigid

**Colour:** various

**Odour:** slight odour

**Solubility:** insoluble in water

**Decomposition:** will decompose at temperatures above 150°C

## Safety Data

Please review 'Safety Data Sheet – PVC' or 'Safety Data Sheet – CC'.

## Maintenance

### Note: Do not use solvents

1. Clean with a mild detergent solution.
2. Dry off if necessary with lint free cloth.
3. Only reopen to traffic once dry.

## Installation

Most PVC products should be applied with a contact adhesive from a leading supplier. Please ensure the surfaces are clean, dry, smooth and free from grease or dust. It is always advisable that the walls/floors are primed first. Follow the instructions for the application of the adhesive very carefully.

Allow the PVC product to acclimatise to room temperature prior to installation.

### Bevel Strips & Ramps

Apply the adhesive to the floor, the edge of the floor covering and the bottom of the bevel edge.

### Dual Edge Joint Covers

Apply adhesive to the floor and base of the profile. Fit the 'thinner' floor covering under flap with foot/flange and the 'thicker' floor covering on the other side.

### Ramped Edge Joint Covers

Apply adhesive to the floor and base of the profile. Fit the floor covering under flap with foot/ flange, with ramp down to the other side.

### 'Topline' Floor Trims

Screw the pre-drilled bases to the floor between the two floor coverings. Position the tops in the base and tap into place using a rubber mallet.

### Cover Joints

Leave either a 50mm or 75mm gap between sheets of vinyl. Place Cover Joint in gap and weld in to place.

## Warranty

Quantum Flooring Solutions warrants that all Quantum Flooring products produced and despatched from its works in Oldham, Lancashire are free from material defects and are fit for purpose when fitted strictly in accordance with the manufacturer's instructions.

This warranty is applicable to Quantum Flooring products that have been correctly specified, installed and maintained. Company leaflets, brochures and data sheets (hard copy and online) are available, and these give details of all necessary and relevant requirements.