


COVE FORMER & CAPTILE STRIPS TO WALL TILES

These two profiles are used in conjunction with each other to allow for the floor covering to be continued up the wall to the tile joint, creating a clean finish in wet and sanitised areas. The Cove Former is installed at the junction of the floor and wall which provides a hidden radiused support for the floor covering as it is curved up the wall. The Capping Strip finishes off the floor covering where it meets the tiles and makes a neat sealed finish to the installation.

Fitting

- i) **Capping Strip:** Scribe a line on the wall where the floor covering is to finish and the tiles begin. Apply solvent free contact adhesive to the back of the capping strip and the wall where it is to be fitted, all in accordance with the recommendations of the adhesive manufacturer. Fit the capping strip (lip down as shown) in place.
- ii) **Cove Former:** Apply solvent free contact adhesive to the back of the cove former and the wall/floor junction, all in accordance with the recommendations of the adhesive manufacturer. Fit the cove former in place.
- iii) Feed the floor covering over the radiused cove former and trim the edge to fit under the lip of the capping strip and apply the tiles when the floor covering is in place – all as shown.

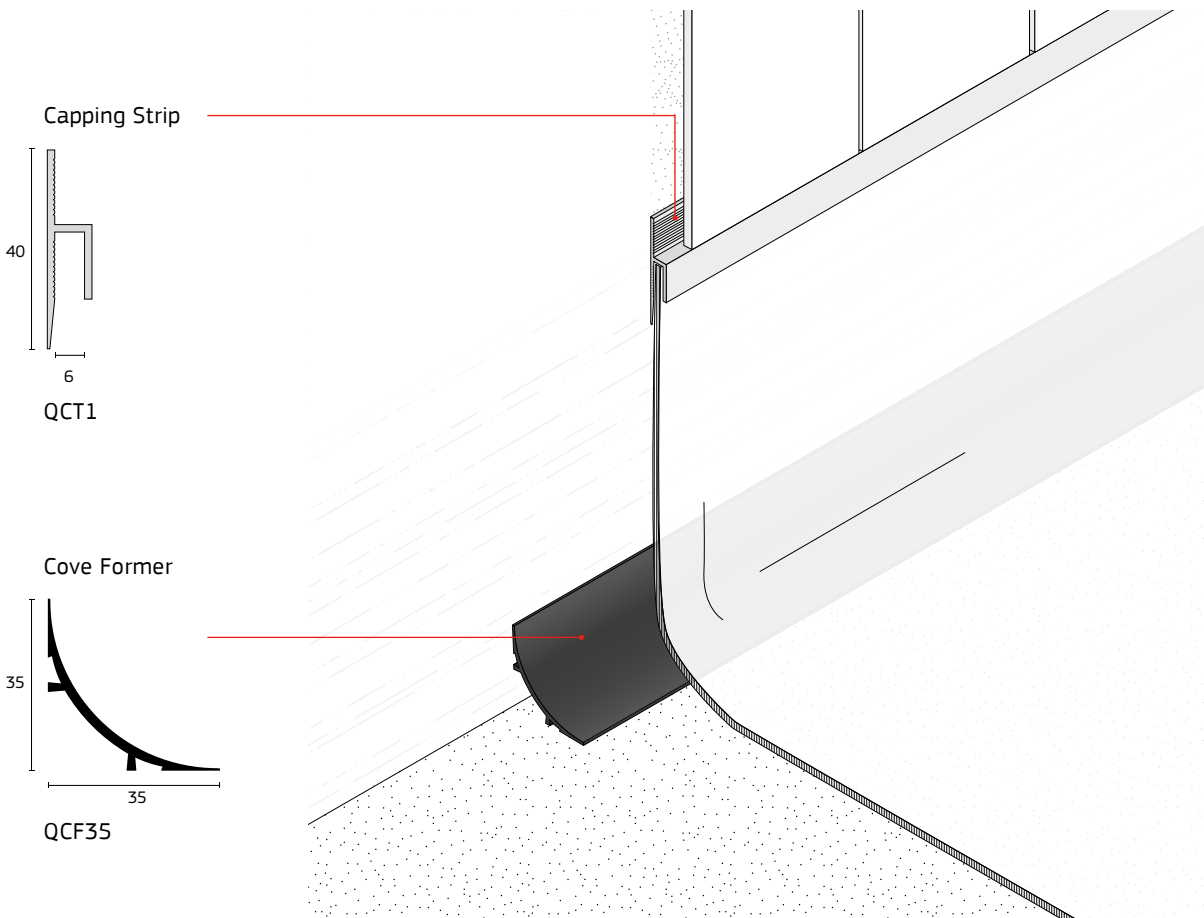

Product Code	Colours - std	Colours - available	Length
QCF35	Black ●	-	2m
QCT1 (R)	White ○	Black ● Cloud Grey ●	2m

IMAGES NOT TO SCALE

Colours shown here are for guide purposes only. For an exact match to your requirements, always request a sample.