

### **SAFETY AT THE HIGHEST LEVEL**

# **Ladder Spurs.**

# **Assembly Instructions**



Easi-Dec Access Systems Ltd., Merlin House, Blaydon Road, Sandy SG19 1RZ


Tel: +44 ( 0 ) 1767 691812 Fax: +44 ( 0 ) 1767 691802 E-Mail: info@easi-dec.com Internet: www.easi-dec.com

Copyright © 2012 Kee Safety Ltd. All rights reserved.

**PLEASE BE ADVISED:** Before assembling the Ladder-Spurs for the first time, it is highly recommended that Installers familiarise themselves with the component parts and carry out a test assembly and disassembly in a safe area away from the point of final installation. All component parts detailed in the operating instructions must be used in the assembly of the system. Should a piece be missing or appear defective do not continue to assemble and contact Easi-Dec Immediately.

## Designed to Limit 'Slip' and increase 'LATERAL STABILITY'


#### Step1

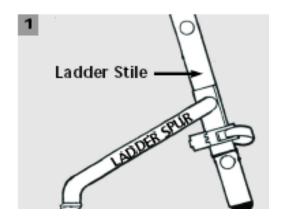

#### To Fit Spur

Fit the **SPUR** to the back of the stile as shown and bring the strap around the inside, passing 1 inch only of strap through the barrel of the buckle.




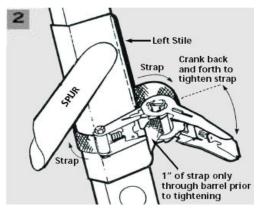

#### Tighten ratchet buckle

Before tightening ensure the rubber foot is in contact with the ground. Only  $\mathbf{1}^n$  (25mm) of the strap should be placed through the barrel prior to tightening. Crank ratchet to maximum tightness and close the lever against the Buckle.

#### Step 3

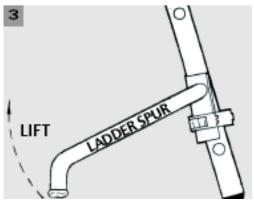

#### Removal

Simply open the lever right back and pull the quick-release to release the strap. Lift the SPUR up to unwind strap from the barrel and remove the SPUR from ladder stile.

#### **IMPORTANT SAFETY NOTE**

Always assess the site conditions and remember the 4:1 rule – if you're 16 feet up the Ladder should be 4 feet from the wall at ground Level.