


Left Hand Hopper, Back Entry

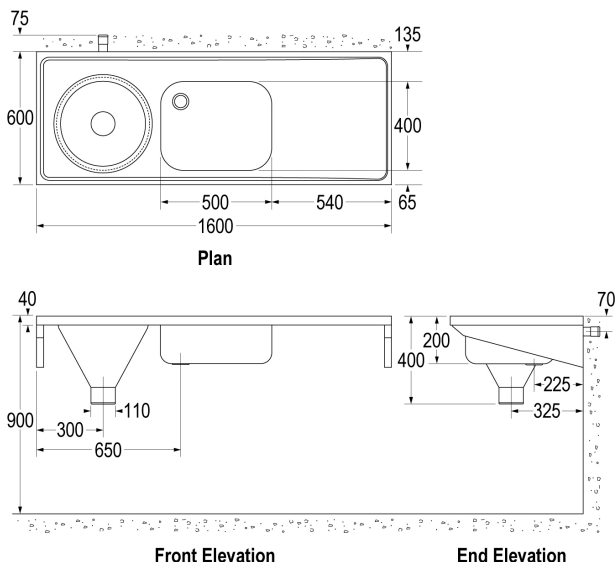

Size

The DU HS hospital pattern disposal unit with sink has an overall plan size of 1600 x 600 mm in accordance with the requirements of HTM64: Sanitary Assemblies (2006).

Disposal Hopper

The disposal hopper can be positioned at either the right or left hand end of the top and has full rim flushing to ensure efficient and hygienic cleansing.

Waste Outlets

The rectangular sink bowl has no overflow and is supplied with a 38 mm 1 1/2" BSP unslotted flush grated waste fitting.

The disposal hopper is manufactured with a 110 mm o/d plain vertical spigot outlet. A white polypropylene P or S trap can be supplied to convert the vertical spigot into a horizontal or vertical outlet

Flushing Inlet

The disposal hopper is supplied as standard with a concealed back entry flushpipe connection for a duct mounted cistern.

As an option the hopper can be provided with an exposed top entry connection for a surface mounted cistern.

Cistern and Flushpipe

As an option the disposal unit with sink can be supplied with a concealed duct mounted plastic manual single flush 6-9 litre cistern with flushpipe and through wall operating mechanism for a concealed back entry connection. Alternatively for an exposed top entry connection an exposed surface mounted stainless steel manual single flush 6-9 litre cistern with flushpipe and front lever operating mechanism can be supplied. All cisterns are SISO and complete with lid, flush valve and float operated inlet valve.

Cistern Height

To efficiently flush the hopper the recommended mounting height is 1450 mm minimum from the underside of the cistern to finished floor level

Tap Hole Positions and Sizes

The disposal unit with sink as standard is not provided with tap holes. As an option the sink bowl can be provided with either one central tap hole or two tap holes at 200 mm centres. Tap hole sizes that can be provided are 22 mm dia, 28 mm dia and 35 mm dia.

Product Code Selection for Order or Quotation

1. Base Product Code

☐ 801 -hospital pattern disposal unit with sink

2. Disposal Hopper Position

☐ R -right hand (as facing) ☐ L -left hand (as facing)

3. Disposal Hopper Flushpipe Connection

☐ BE -back entry ☐ TE -top entry

4. Tap Holes, Positions and Sizes

☐ N -no tap holes ☐ 22 -22 mm diameter
☐ C -centre tap hole ☐ 28 -28 mm diameter
☐ T -two tap holes ☐ 35 -35 mm diameter

5. Options


☐ P -white polypropylene P trap ☐ S -white polypropylene S trap

☐ 142 -plastic concealed manual cistern

☐ 132 -stainless steel manual cistern

☐ FL -front support legs

Left Hand Hopper, Top Entry

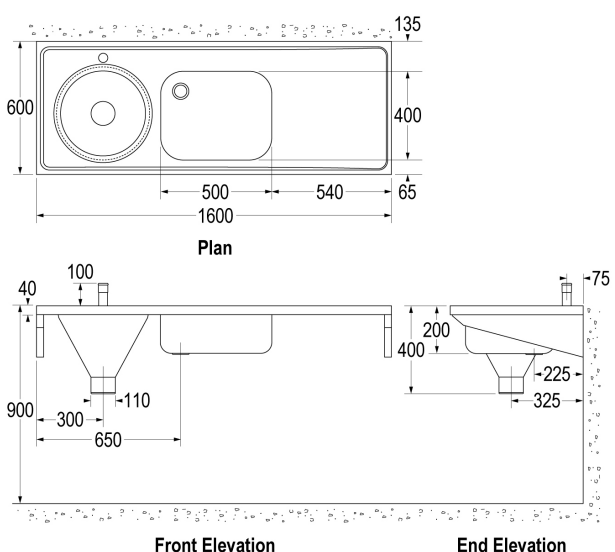

As improvements in the design and performance of Acorn Powell Limited products is continuous specifications may be subject to change without notification